

INSPECTION

1. INSPECT EVAPORATOR

(a) Check evaporator fins for blockage.

If the fins are clogged, clean them with compressed air.

NOTICE:

Never use water to clean the evaporator.

(b) Check fitting for cracks or scratches.

If necessary, repair or replace.

2. **INSPECT THERMISTOR (See page [AC-66](#))**

3. **INSPECT BLOWER RESISTOR (See page [AC-65](#))**

4. **INSPECT EXPANSION VALVE (See page [AC-23](#))**