


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all the coolant.

2. REMOVE LUGGAGE COMPARTMENT TRIM BOX COVER

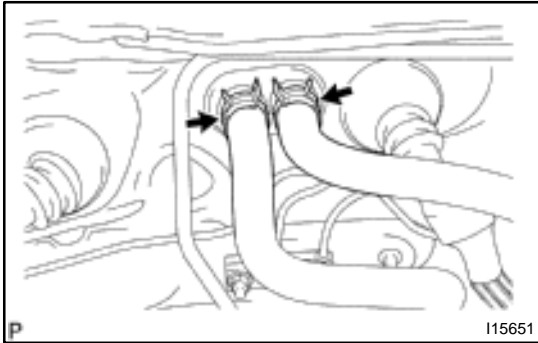


3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- (a) Using pliers, grip the claw of the hose clip and slide the hose clip along the hose.
- (b) Disconnect the 2 heater hoses.

4. REMOVE PIPE GROMMETS

5. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-41](#))

6. REMOVE COOLING UNIT (See page [AC-26](#))

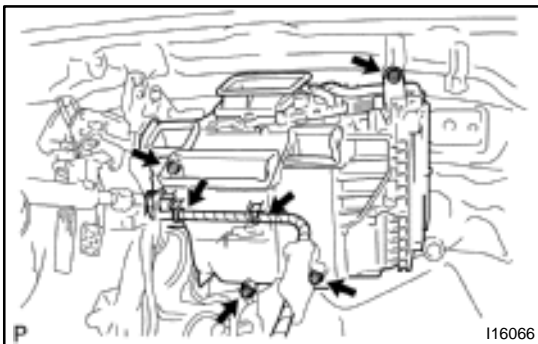

7. REMOVE HEATER UNIT

- (a) Disconnect the 2 wire clamps and remove the 2 screws holding the wire to the heater unit.
- (b) Disconnect the 2 connector clamps.
- (c) Remove the 3 nuts and heater unit.