



REPLACEMENT

1. REMOVE DRIVE BELT

Loosen the drive belt tension by turning the drive belt tensioner arm clockwise, and remove the drive belt.

2. REINSTALL DRIVE BELT

Turning the drive belt tensioner arm clockwise, and install the drive belt.

3. CHECK DRIVE BELT INSTALLATION CONDITION