


## DISASSEMBLY

### 1. REMOVE HEATER RADIATOR

- (a) Remove the screw and clamp.
- (b) Pull out the heater radiator.

### 2. REMOVE DEFROSTER NOZZLE

Remove the screw and defroster nozzle.

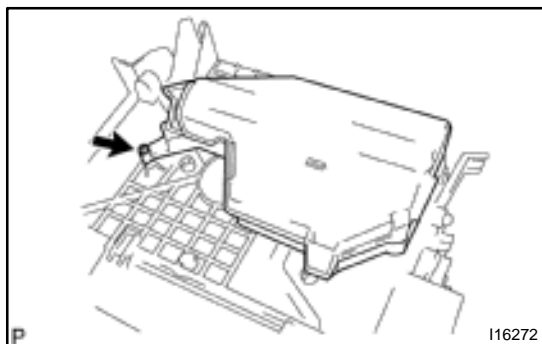

### 3. REMOVE HEATER COVER

Remove the 2 claws, screw and heater cover.