



DISASSEMBLY

1. REMOVE BLOWER MOTOR

Using a torx wrench, remove the 3 screws and blower motor.

2. INSPECT BLOWER MOTOR (See page [AC-64](#))