


## REMOVAL

1. RUN ENGINE AT IDLE SPEED WITH A/C ON FOR APPROX. 10 MINUTES
2. STOP ENGINE
3. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY
4. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM
5. REMOVE FRONT ENGINE UNDER COVER
6. REMOVE DRIVE BELT (See page [AC-17](#))

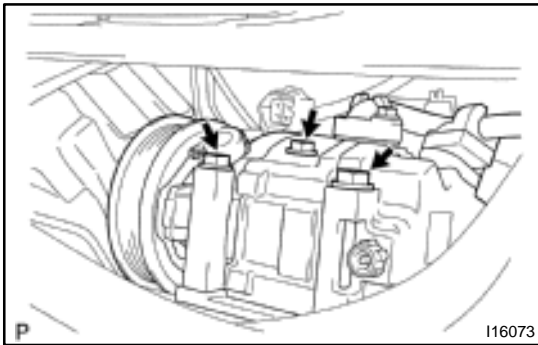


### 7. REMOVE COMPRESSOR

- (a) Disconnect the connector.
- (b) Disconnect the wire harness clamp.
- (c) Remove the 3 bolts and disconnect the compressor.

#### NOTICE:

Be careful not to damage the discharge and suction hose.

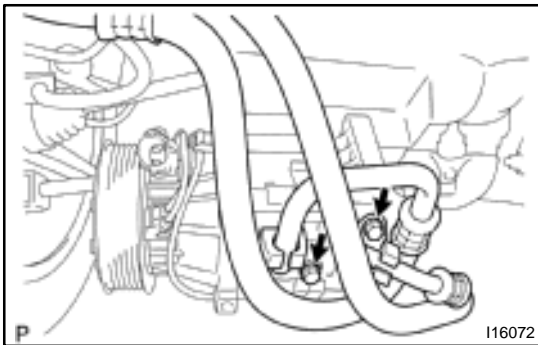

### 8. DISCONNECT DISCHARGE AND SUCTION HOSES

Remove the 2 bolts and disconnect the both hoses.

#### NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.