



DISASSEMBLY

1. REMOVE PRESSURE PLATE


- (a) Using SST and a socket wrench, remove the shaft bolt.
SST 07112-76050

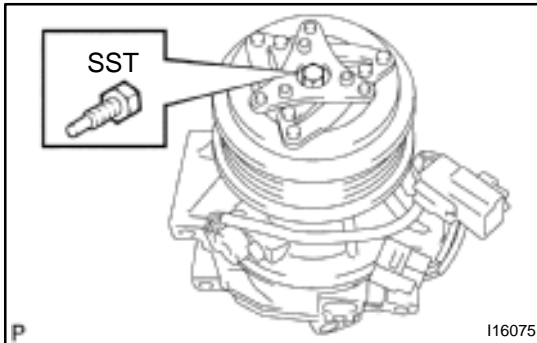


- (b) Install SST on the pressure plate.
SST 07112-66040

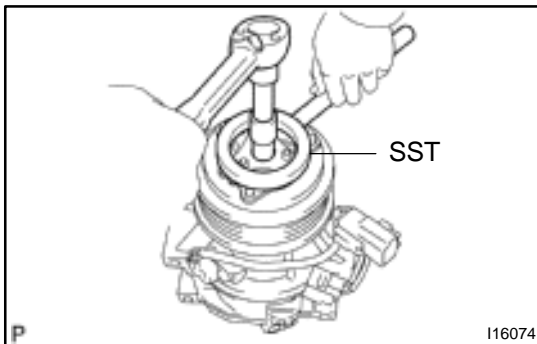

- (c) Using SST and socket wrench, remove the pressure plate.
SST 07112-66040, 07112-76050

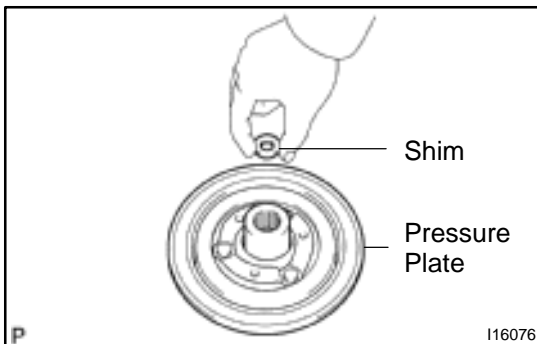


- (d) Remove the shims from the pressure plate.

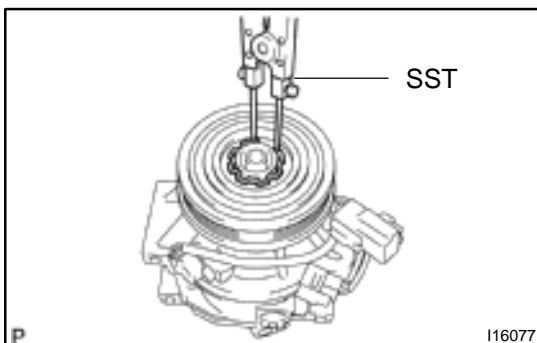


2. REMOVE ROTOR

- (a) Using SST, remove the snap ring.
SST 07114-84020

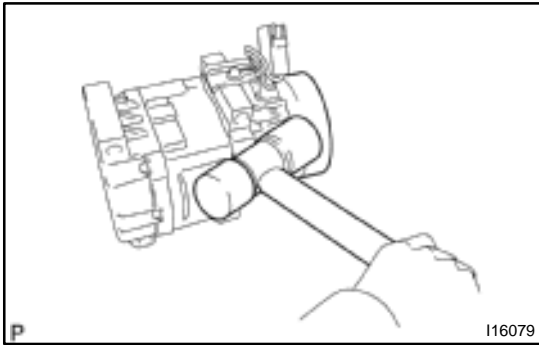


- (b) Using a plastic hammer, tap the rotor off the shaft.
NOTICE:
Be careful not to damage the pulley when tapping on the rotor.

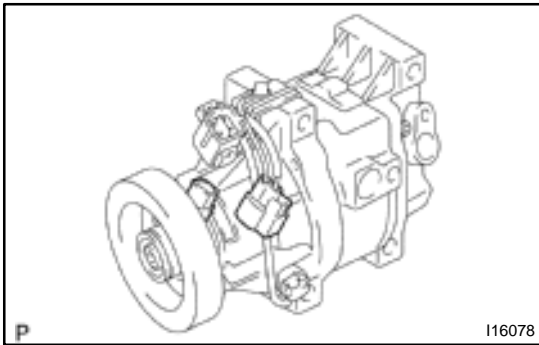


3. REMOVE STATOR


- (a) Disconnect the connector from the stator.

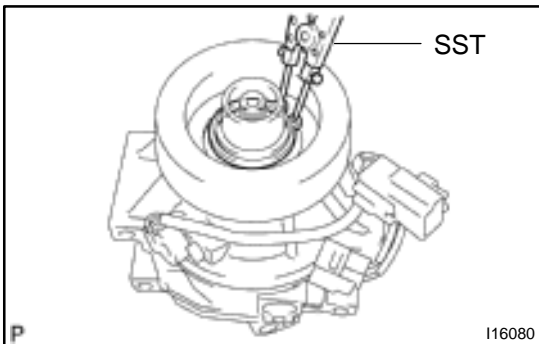

- (b) Using SST, remove the snap ring.
 SST 07114-84020

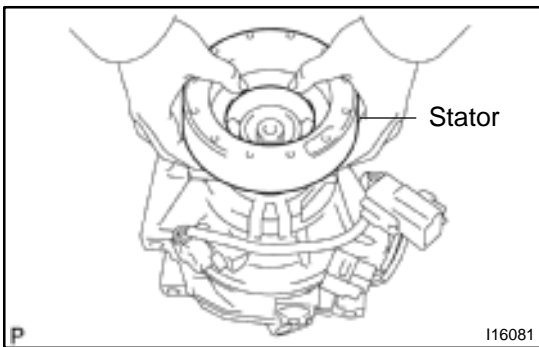

- (c) Remove the stator.

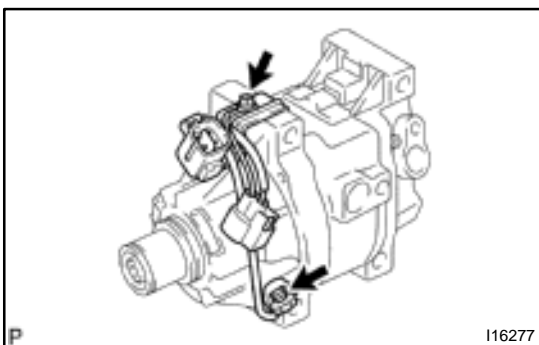

- (d) Remove the 2 bolts, wire harness and lock sensor assembly.