



REMOVAL

1. REMOVE LUGGAGE COMPARTMENT TRIM BOX COVER AND TOOL BOX ASSEMBLY
2. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

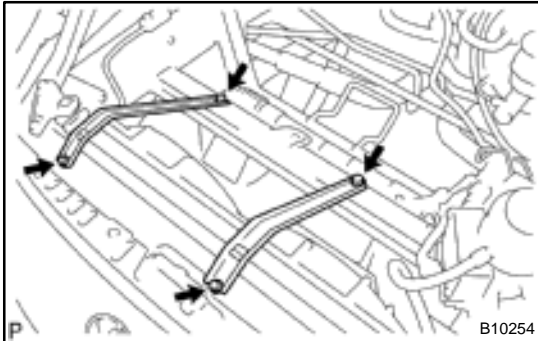


3. DISCONNECT RADIATOR ASSEMBLY


- (a) Remove the 2 nuts, 2 bolts and 2 spare wheel carrier extensions.

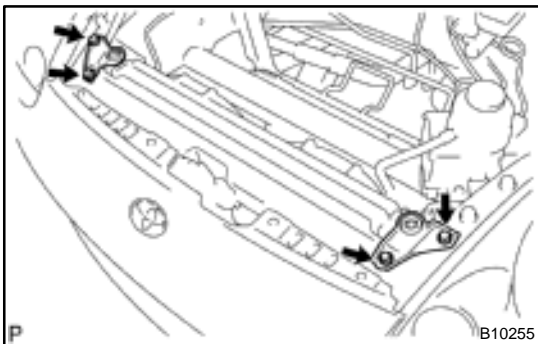

- (b) Remove the 4 bolts and 2 radiator upper support.

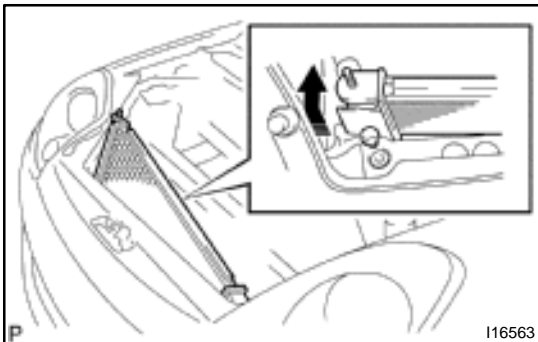


- (c) Pull up the radiator right side, remove the bush at the bottom side of the radiator from the existing concave, and move it backward.

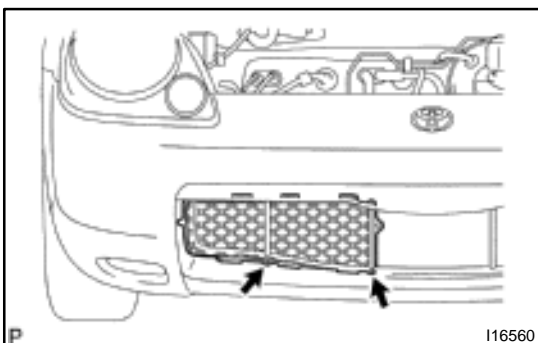

4. REMOVE LIQUID TUBE AND DISCHARGE TUBE


- (a) Remove the 4 screws, RH and LH radiator grilles.

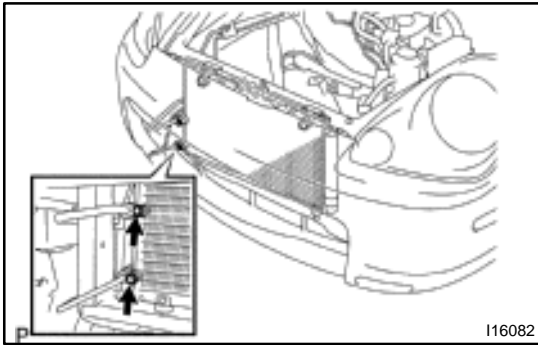

(b) Remove 2 bolts and both tubes.


NOTICE:

Cap the open fittings immediately to keep moisture out of the system.

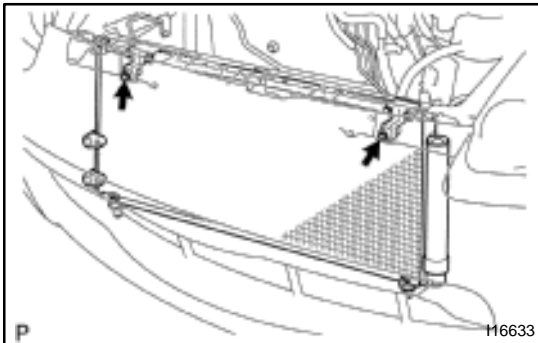

5. REMOVE CONDENSER

(a) Remove the 2 bolts.

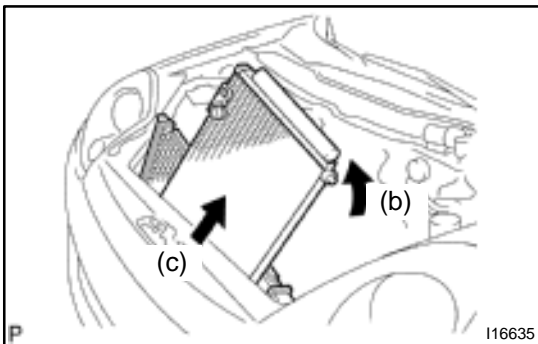

(b) As shown in the illustration, turn the condenser and pull up the half of it.

(c) Then pull up the condenser at a slant.

NOTICE:

Be careful not to damage the radiator and condensor.