


## BLOWER MOTOR INSPECTION


AC1GP-03

1. REMOVE GLOVE COMPARTMENT DOOR
2. REMOVE DOOR SCUFF PLATE
3. REMOVE COWL SIDE TRIM

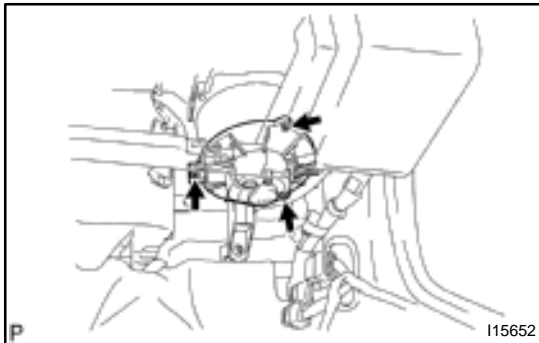

### 4. REMOVE BLOWER MOTOR

- (a) Disconnect the blower motor connector.
- (b) Using a torx wrench, remove the 3 screws and blower motor.

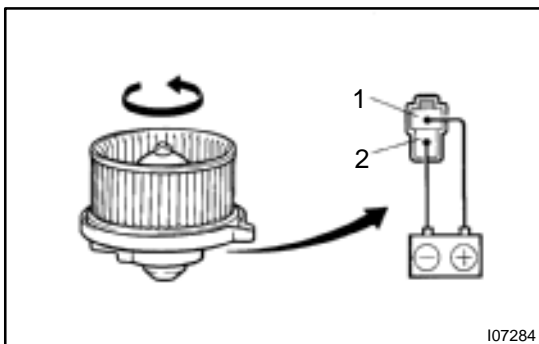

### 5. INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operations smoothly.

If operation is not as specified, replace the blower motor.

### 6. INSTALL BLOWER MOTOR

- (a) Using a torx wrench, install the blower motor with the 3 screws.
- (b) Connect the blower motor connector.

### 7. REINSTALL COWL SIDE TRIM

### 8. REINSTALL DOOR SCUFF PLATE

### 9. REINSTALL GLOVE COMPARTMENT DOOR