


BLOWER RESISTOR INSPECTION


AC201-01

1. REMOVE GLOVE COMPARTMENT DOOR

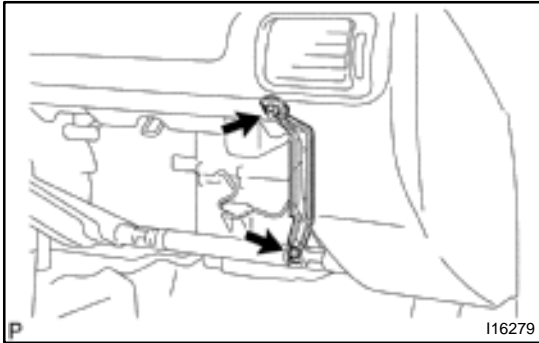


2. REMOVE NO.1 INSTRUMENT PANEL LOWER BRACKET

Remove the nut, screw and No.1 instrument panel lower bracket.

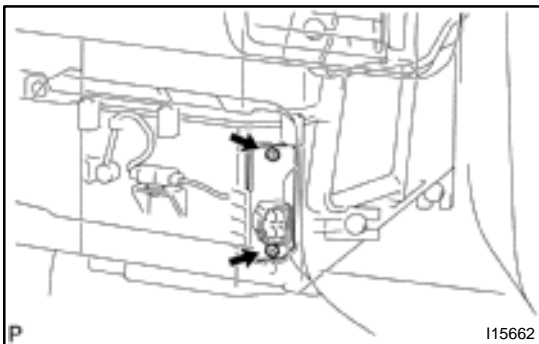

3. REMOVE BLOWER RESISTOR

- (a) Disconnect the blower resistor connector.
- (b) Remove the 2 screws and blower resistor.

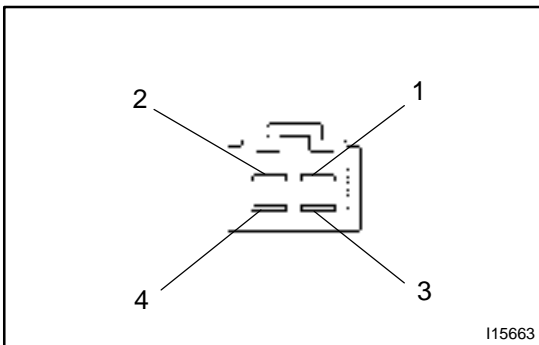

4. INSPECT BLOWER RESISTOR CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2 – 3 – 4	Continuity

If continuity is not as specified, replace the blower resistor.

5. REINSTALL BLOWER RESISTOR

- (a) Install the blower resistor with the 2 screws.
- (b) Connect the blower resistor connector.

6. REINSTALL NO.1 INSTRUMENT PANEL LOWER BRACKET

7. REINSTALL GLOVE COMPARTMENT DOOR