


REMOVAL

1. REMOVE LUGGAGE COMPARTMENT TRIM BOX COVER
2. REMOVE TOOL BOX ASSEMBLY
3. DISCHARGE REFRIGERANT FROM REFRIGERANT SYSTEM

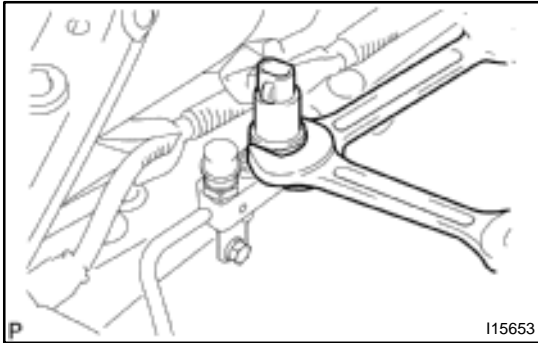

4. REMOVE PRESSURE SWITCH

- (a) Disconnect the pressure switch connector.
- (b) Remove the pressure switch from the liquid tube.

Torque: 10.8 N·m (110 kgf·cm, 8 ft·lbf)

HINT:

Lock the switch mount on the tube with an open end wrench, being careful not to deform the tube, and remove the switch.