


INSPECTION


1. REMOVE BATTERY
2. REMOVE MAGNETIC CLUTCH RELAY (Marking: A/C COMP) FROM ENGINE ROOM R/B

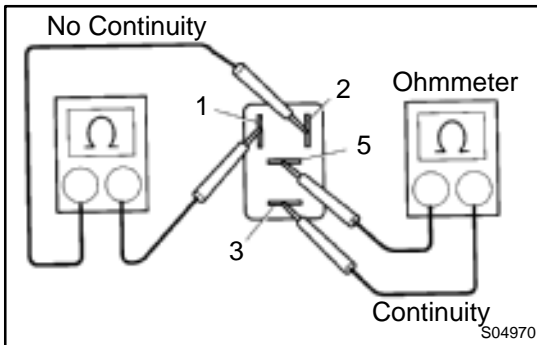

3. INSPECT MAGNETIC CLUTCH RELAY

- (a) Inspect the relay continuity.
 - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- If there is no continuity, replace the relay.
- (2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

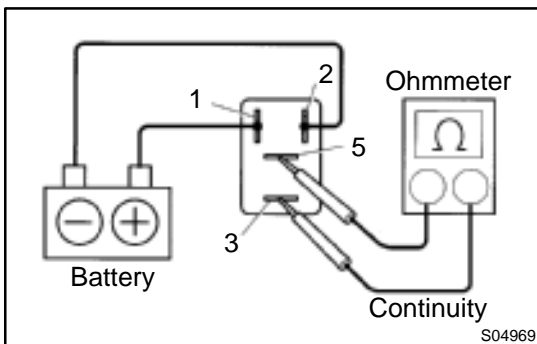

- (b) Inspect the relay operation.
 - (1) Apply battery positive voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

4. REINSTALL MAGNETIC CLUTCH RELAY
5. REINSTALL BATTERY