

INSPECTION

1. INSPECT TENSION REDUCER SOLENOID OPERATION

- Connect the positive (+) lead from the battery to terminal 1, and the negative (-) lead to terminal 2.
- Pull the belt upward and check that the belt is slowly retracted when released.

- Disconnect the lead from the battery.
- Pull the belt upward and check that the belt is retracted more quickly when released than in (b).


HINT:

Do not tilt the retractor.

If the operation is not as specified, replace the front seat outer belt assembly.

CAUTION:

Must not charge the connector terminal of the pretensioner. The pretensioner may work resulting in an unexpected injury.

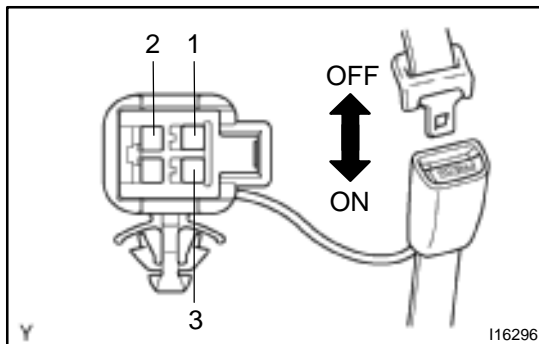

2. Driver's side:

INSPECT BUCKLE SWITCH CONTINUITY

- Check that continuity exists between terminals 1 and 3 on the switch side connector with the switch ON (belt fastened).
 - Check that no continuity exists between terminals 1 and 2 on the switch side connector with the switch OFF (belt unfastened).
 - Check that no continuity 1 and 2 (belt fastened).
 - Check that continuity 1 and 2 (belt unfastened).
- If operation is not as specified, replace the switch.