

INSPECTION

1. INSPECT LEFT SIDE MIRROR SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	4–8 6–7	Continuity
DOWN	4–7 6–8	Continuity
LEFT	5–8 6–7	Continuity
RIGHT	5–7 6–8	Continuity

If continuity is not as specified, replace the switch.

2. INSPECT RIGHT SIDE MIRROR SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	3–8 6–7	Continuity
DOWN	3–7 6–8	Continuity
LEFT	2–8 6–7	Continuity
RIGHT	2–7 6–8	Continuity

If continuity is not as specified, replace the switch.

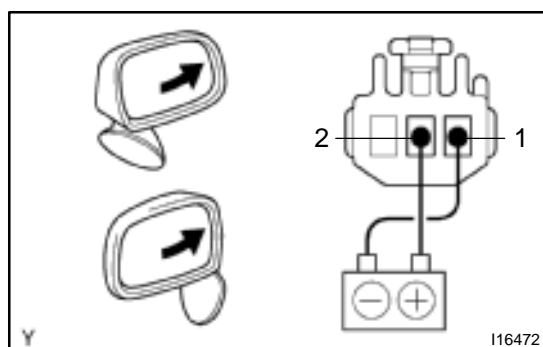


3. INSPECT MIRROR MOTOR OPERATION


- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, and check that the mirror turns to the right.

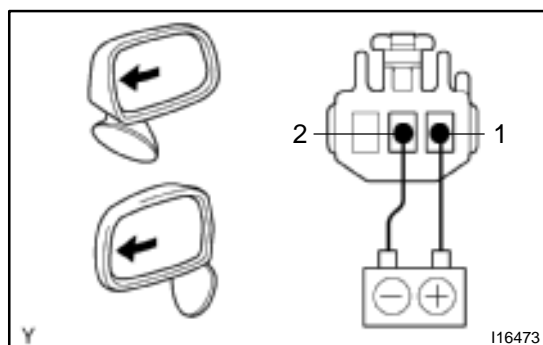

- (b) Reverse the polarity, and check that the mirror turns to the left.

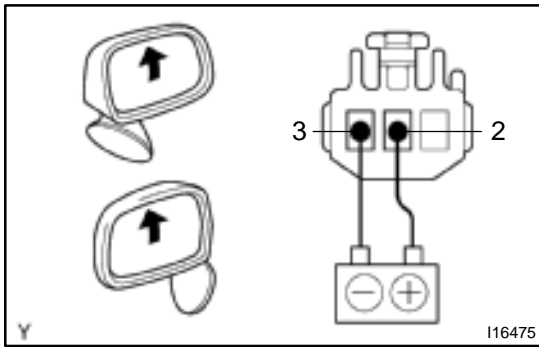

- (c) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 3, and check that the mirror turns downward.

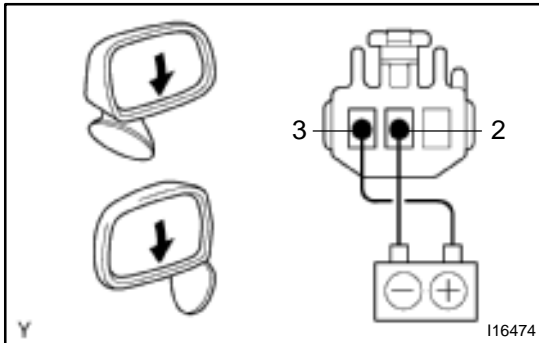

- (d) Reverse the polarity, and check that the mirror turns upward.
If operation is not as specified, replace the mirror assembly.