
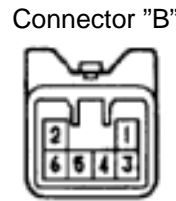


INSPECTION

INSPECT RADIO RECEIVER ASSEMBLY CIRCUIT

Disconnect the connectors from the radio receiver assembly, and inspect the connector on the wire harness side.

Radio Receiver Side

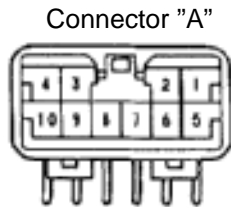

I12416

Tester connection	Condition	Specified condition
A1 - Ground (FR+)	Audiosounding	5 - 7 V
A2 - Ground (FL+)	Audiosounding	5 - 7 V
A3 - Ground (ACC)	Ignition switch ACC	Battery positive voltage
A4 - Ground (+B)	Constant	Battery positive voltage
A5 - Ground (FR-)	Audiosounding	5 - 7 V
A6 - Ground (FL-)	Audiosounding	5 - 7 V
A7 - Ground (E)	Constant	Continuity
A10 - Ground (ILL+)	Light control switch TAIL or HEAD	Battery positive voltage
B1 - Ground (RR+)	Audiosounding	5 - 7 V
B2 - Ground (RL+)	Audiosounding	5 - 7 V
B3 - Ground (RR-)	Audiosounding	5 - 7 V
B6 - Ground (RL-)	Audiosounding	5 - 7 V

If the circuit is not as specified, inspect the circuits connected to other parts.