



## REMOVAL

1. REMOVE FRONT BUMPER COVER  
(See page [BO-4](#))
2. REMOVE LUGGAGE COMPARTMENT TRIM BOX COVER
3. REMOVE TOOL BOX

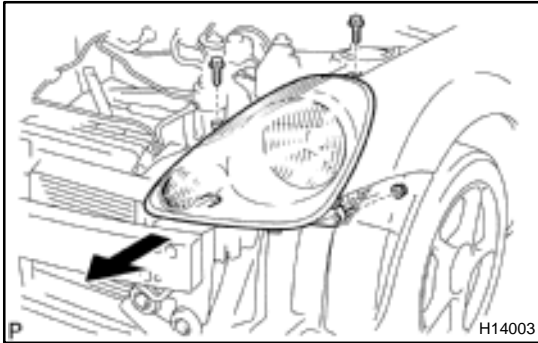

4. REMOVE HEADLIGHT

- (a) Remove the 2 bolts and nut.
- (b) Disconnect the connectors, then remove the headlight as shown in the illustration.
- (c) Employ the same manner described above to the other side.

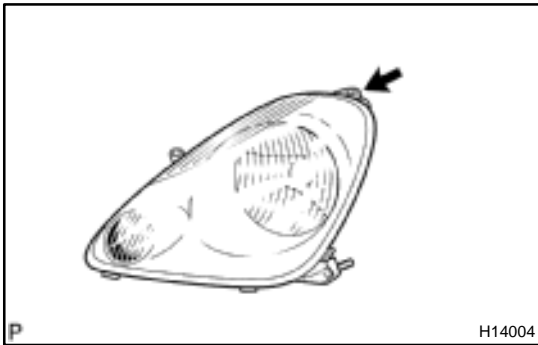

**HINT:**

At the time of installation, please refer to the following item.  
If the shown part of the headlight is damaged, the headlight can be reinstalled to the body by installing a bracket to it.