

# INSPECTION

## INSPECT FRONT DOOR GLASS

Check the following. If the conditions are not met, readjust the glass.

- (1) When you close the door with the glass fully closed, the a-a, b-b, c-c sections are in the same condition as shown in the illustration.
- (2) When you close the door with the glass fully closed, check that the weatherstrip is not pinched and that the door glass is not in contact with the roof drip moulding.
- (3) When the door glass is fully closed, check that the outside edge of the door glass is in contact with the weatherstrip at the front pillar and roof side and that the edge of the glass cannot be seen.
- (4) Check that the door glass is not loose when it is half open.
- (5) When the door glass is rising up, check that the door glass and roof side weatherstrip are parallel and that the door glass contacts the 2 upper stops.
- (6) Check that the door glass moves up and down smoothly over all areas.

