


INSTALLATION

1. INSTALL WINDOW WASHER NOZZLE

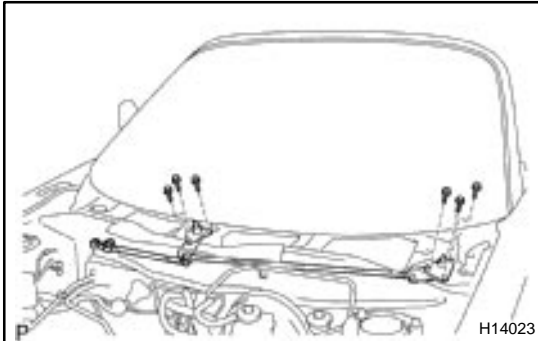

2. INSTALL WIPER LINK ASSEMBLY

Install the wiper link with the 6 bolts.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

3. INSTALL WIPER MOTOR

(a) Install the wiper motor with the 4 bolts.


Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

(b) Connect the wiper link to the wiper motor.

(c) Connect the connector.

4. INSTALL LUGGAGE COMPARTMENT TRIM BOX COVER

5. INSTALL TOOL BOX

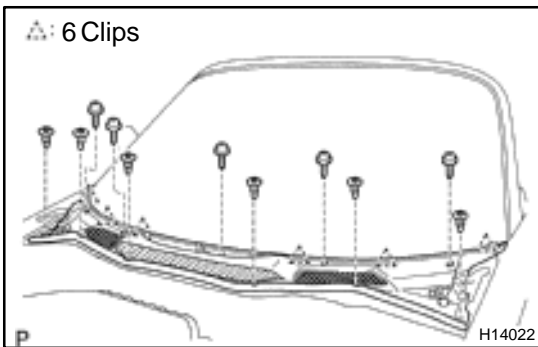

6. INSTALL COWL TOP VENTILATOR LOUVER

Install the cowl top ventilator louver with the 5 screws and 6 clips.

HINT:

Check that the 6 clips on the back side of the cowl top ventilator louver are surely fixed to the body.

7. INSTALL WIPER ARMS

(a) Operate the wipers once and turn the wiper switch OFF.

(b) Install the wiper arms and tighten the nuts by hand.

(c) Adjust the installation positions of the wiper arms to the positions as shown in the illustration.

A: 25 – 40 mm (0.98 – 1.57 in.)

(d) Torque the nuts.

Torque: 20 N·m (200 kgf·cm, 15 ft·lbf)

(e) Install the wiper arm head cap.

