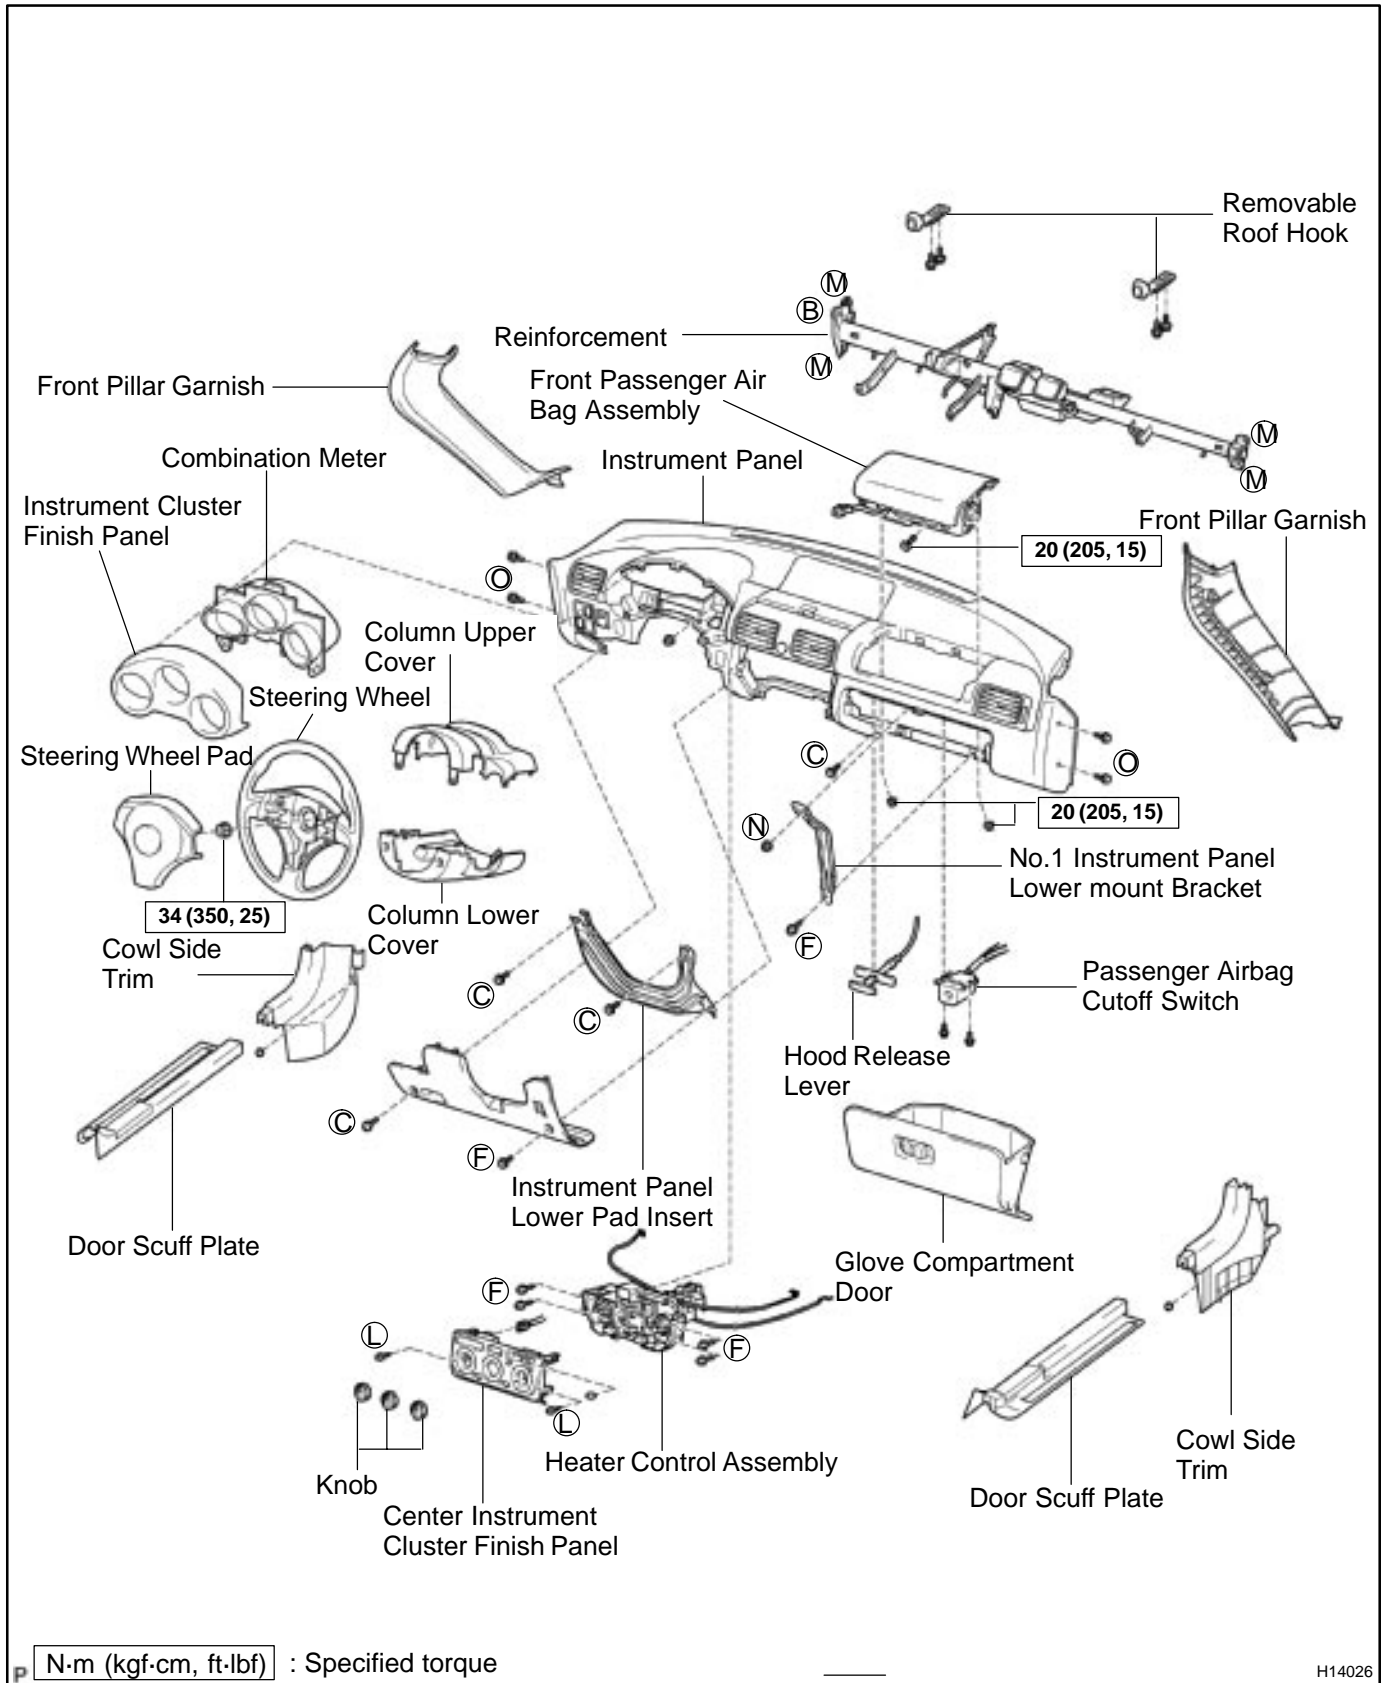
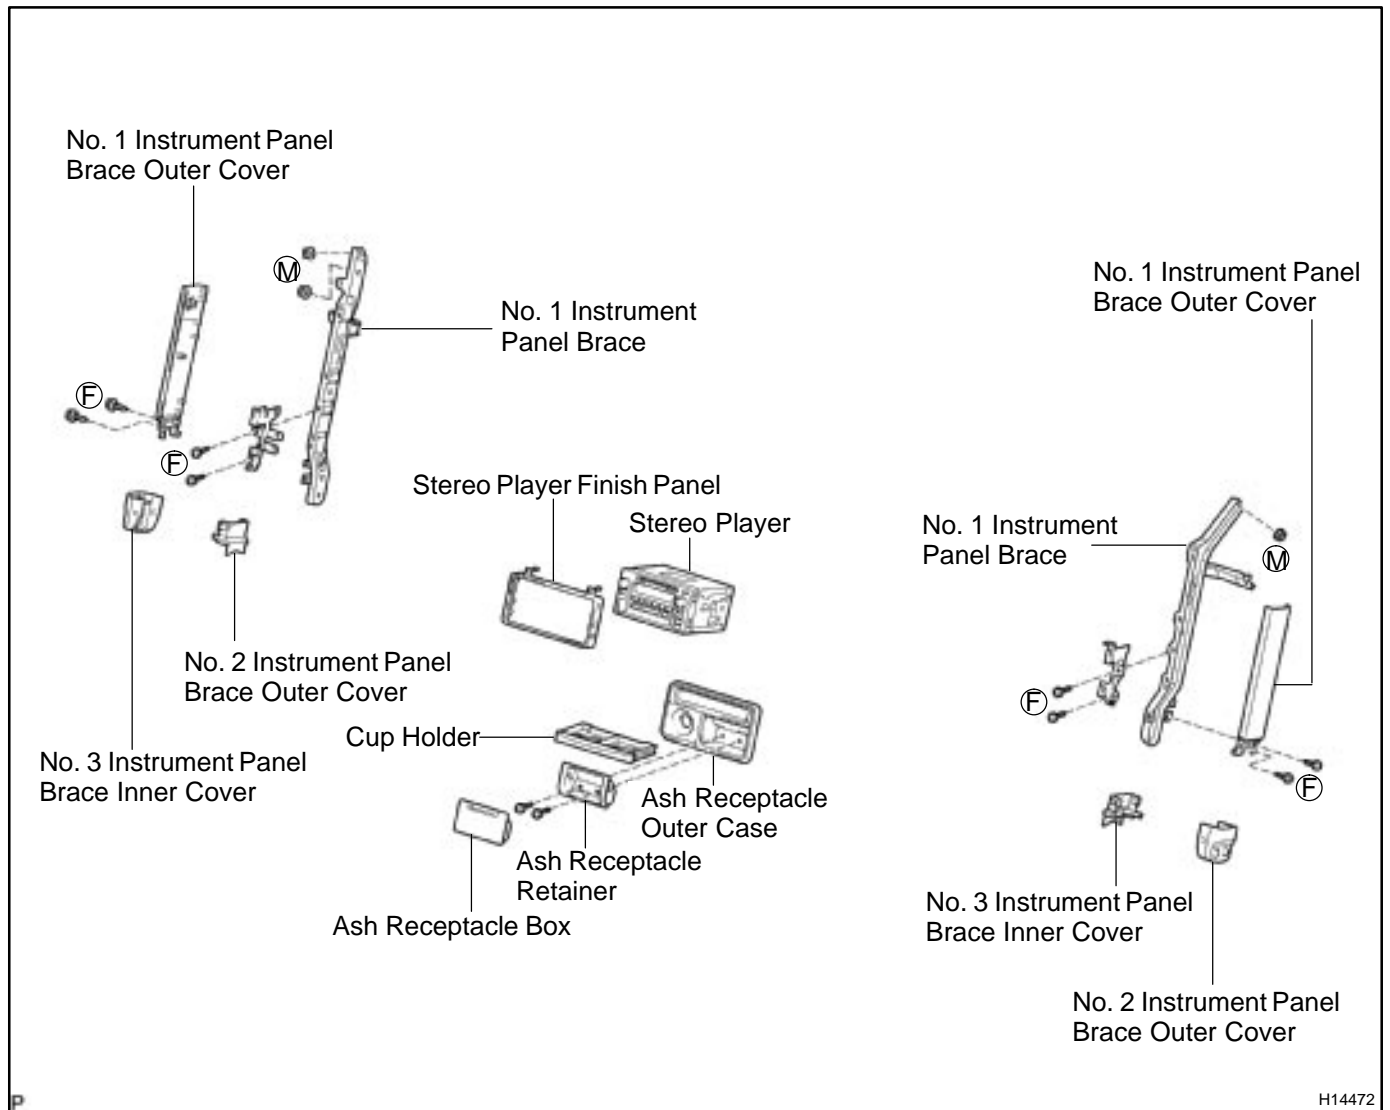


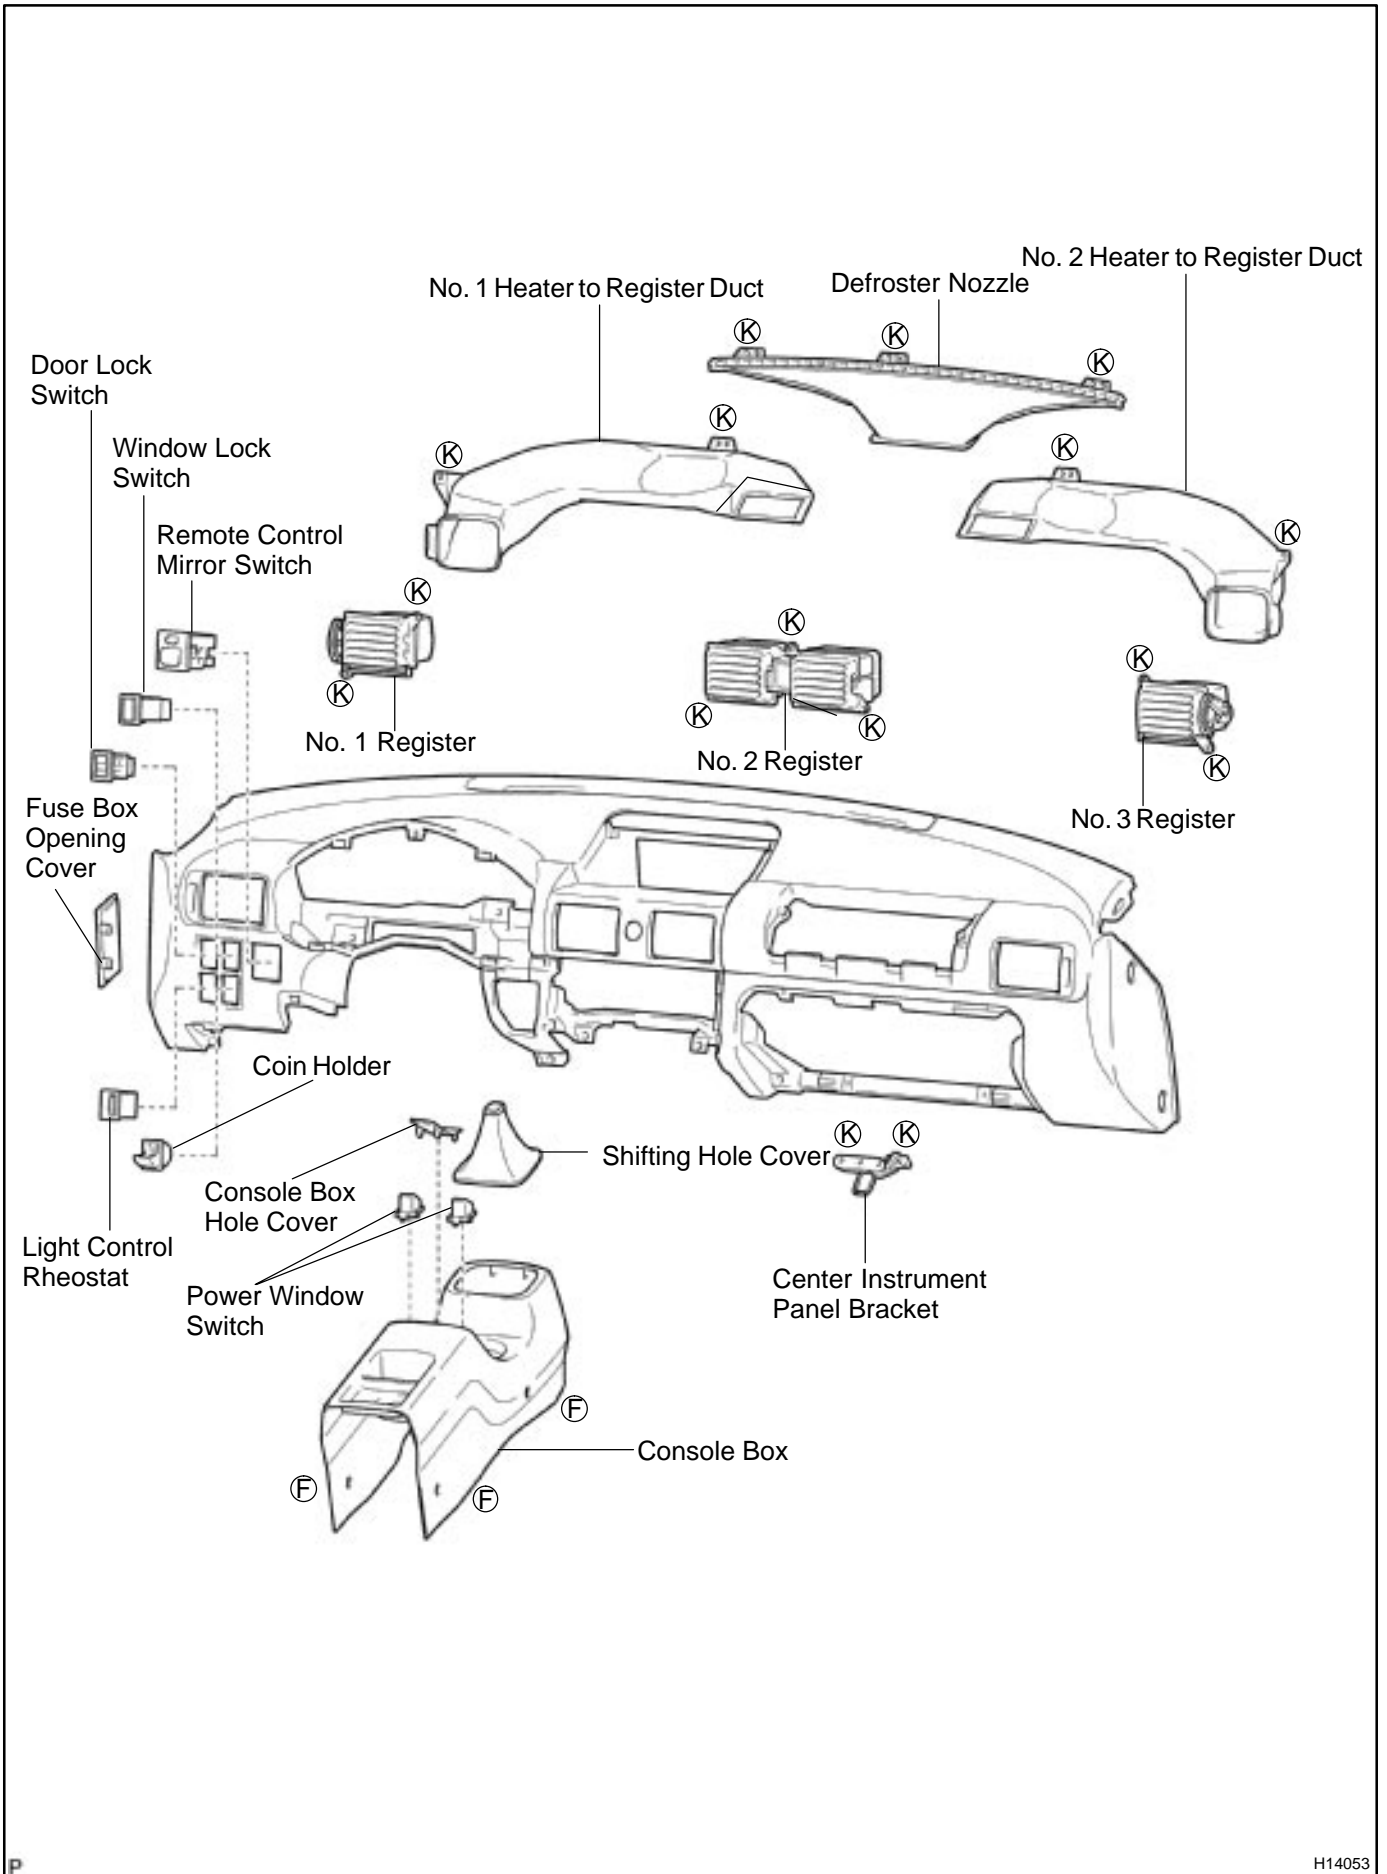
INSTRUMENT PANEL COMPONENTS

BO340-01



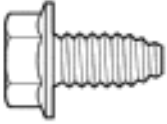
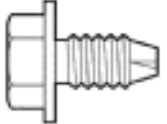
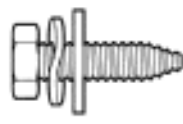
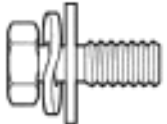
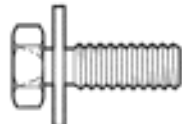
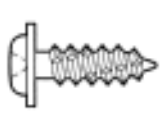
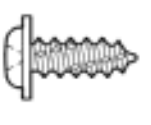
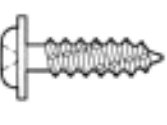
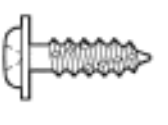
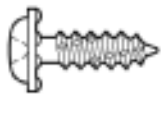
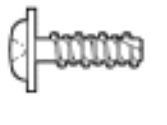
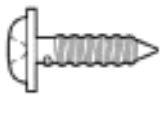


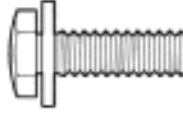


BODY - INSTRUMENT PANEL



HINT:

Screw shapes and sizes are indicated in the table below. The codes ("A" - "O") correspond to those indicated on the previous page.

				mm (in.)	
	Shape	Size		Shape	Size
A		ø = 8 (0.32) L = 16 (0.63)	B		ø = 8 (0.32) L = 15 (0.59)
C		ø = 6 (0.24) L = 22 (0.87)	D		ø = 6 (0.24) L = 16 (0.63)
E		ø = 6 (0.24) L = 18 (0.71)	F		ø = 5.22 (0.2055) L = 16 (0.63)
G		ø = 5.22 (0.2055) L = 16 (0.63)	H		ø = 5 (0.20) L = 18 (0.71)
I		ø = 5 (0.20) L = 16 (0.63)	J		ø = 5 (0.20) L = 16 (0.63)
K		ø = 5 (0.20) L = 14 (0.55)	L		ø = 4 (0.16) L = 16 (0.63)
M		ø = 8 (0.32)	N		ø = 6 (0.24)
O		ø = 6 (0.24) L = 20 (0.78)			

P

H14402