

REMOVAL

REMOVE FRONT SEAT

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors.
- (c) Remove the front seat.

NOTICE:

Be careful not to damage the body.