

INSTALLATION

NOTICE:

- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.
- Make sure that the front seat outer belt is installed with the specified torque.
- If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.
- When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.


1. INSTALL RETRACTOR OF FRONT SEAT OUTER BELT

- (a) Install the retractor of the front seat outer belt with the 2 bolts.

Torque:

Upper bolt: 7.5 N·m (76 kgf·cm, 66 in.-lbf)

Lower bolt: 43 N·m (440 kgf·cm, 32 ft-lbf)

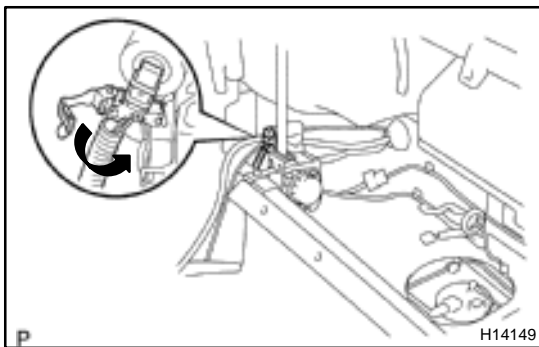

- (b) Connect the pretensioner connector as shown in the illustration.

- (c) Only driver side:

Connect the retractor switch connector.

2. INSTALL FRONT SEAT OUTER BELT SHOULDER ANCHOR

Torque: 42 N·m (420 kgf·cm, 30 ft-lbf)

3. INSTALL LUGGAGE COMPARTMENT BOX

4. INSTALL QUARTER TRIM PANEL

5. INSTALL FRONT SEAT OUTER BELT FLOOR ANCHOR

Torque: 42 N·m (420 kgf·cm, 30 ft-lbf)

6. INSTALL LOWER REAR SEPARATOR TRIM COVER

7. INSTALL LUGGAGE COMPARTMENT LID

8. INSTALL FRONT DOOR SCUFF PLATE