

INSPECTION

1. INSPECT WATER LEAKAGE

Check from the outside of the vehicle that there is no water leakage.

- (1) In case of pouring water with hose, do not water with the hose squeezed.
- (2) There is a possibility of water leakage even in a normal condition if you water under the tarpaulin.

NOTICE:

In case that the water leaks, Check and adjust the door glass and the tarpaulin alignment.

2. INSPECT TARPAULIN COVER FOR PROPER TENSION AND CREASES

Tarpaulin cover tension checking.

By making the tarpaulin in a full-open condition, check the tension of the cover visually and by touching.

NOTICE:

Depending on the tension or wrinkling condition, re-spread the cover.

3. INSPECT TARPAULIN COVER



- (a) Inspect the roof drip moulding gap.

Standard gap:

	Vertical direction	Horizontal direction
Frontmoulding	1.5 mm (0.059 in) or less	1.5 mm (0.059 in) or less
Rearmoulding	1.0 mm (0.039 in) or less	1.0 mm (0.039 in) or less

NOTICE:

In case that it is out of the standard range, adjust or replace the roof drip moulding.

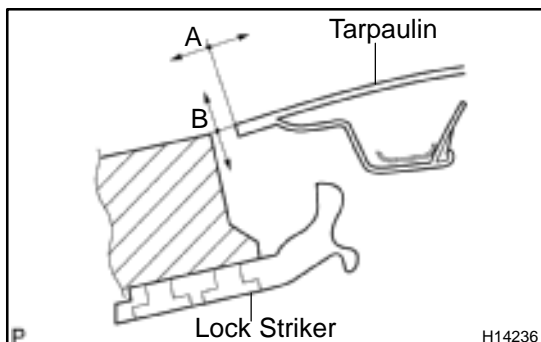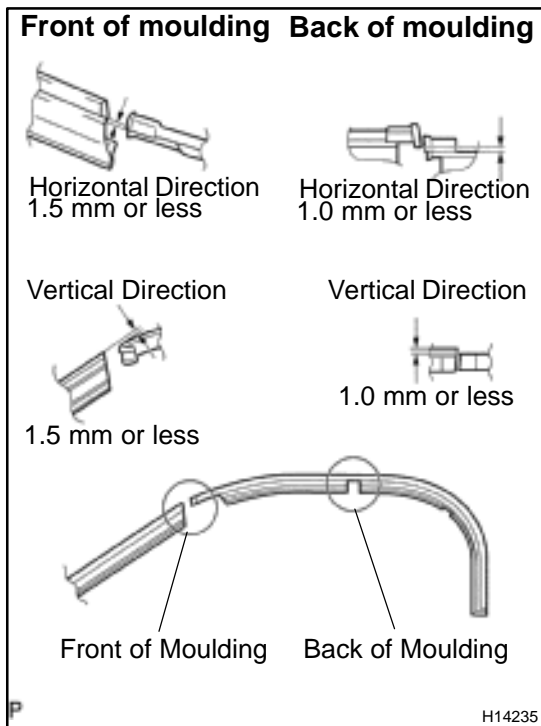

- (b) Inspect the roof header measurement.

Standard measurement:

A: 0 ± 2.0 mm (0.079 in.)

B: 0 ± 2.0 mm (0.079 in.)

NOTICE:

In case that it is out of the standard range, adjust the tarpaulin assembly.