



INSTALLATION

1. INSTALL BRAKE MASTER CYLINDER

- (a) Install a new O-ring to the master cylinder.

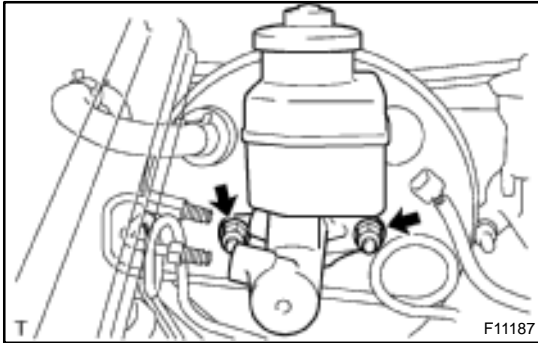

- (b) Install the master cylinder with the 2 nuts.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

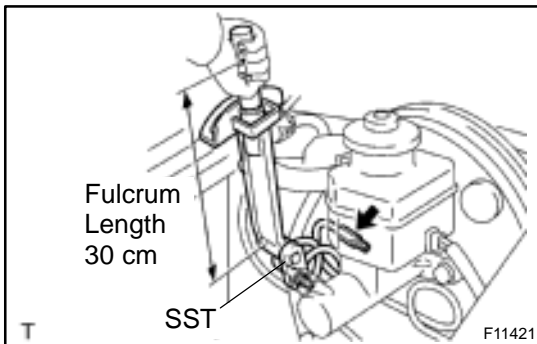

2. CONNECT BRAKE LINES TO MASTER CYLINDER

Using SST, connect the 2 brake lines.

SST 09023-00100

Torque:

15 N·m (155 kgf·cm, 11 ft·lbf)

14 N·m (143 kgf·cm, 10 ft·lbf) for use with SST

HINT:

Use a torque wrench with a fulcrum length of 30 cm (11.81in.).

3. **CONNECT LEVEL WARNING SWITCH CONNECTOR**
4. **FILL RESERVOIR WITH BRAKE FLUID AND BLEED BRAKE SYSTEM (See page BR-4)**
5. **CHECK FOR FLUID LEAKAGE**
6. **CHECK AND ADJUST BRAKE PEDAL (See page BR-6)**
7. **INSTALL LUGGAGE COMPARTMENT TRIM BOX COVER**