


REMOVAL

1. REMOVE MASTER CYLINDER (See page BR-10)
2. REMOVE TOOL BOX
3. DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER

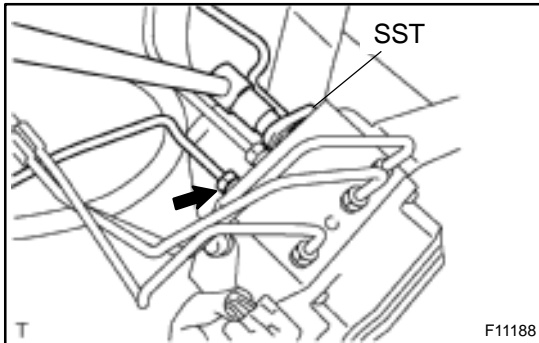

4. REMOVE 2 BRAKE LINES

Using SST, remove the 2 brake lines from the ABS actuator.

SST 09023-00100

5. REMOVE BRAKE BOOSTER

- (a) Using needle-nose pliers, remove the return spring and clip.
- (b) Remove the clevis pin and wave washer.
- (c) Remove the 4 nuts and clevis.
- (d) Pull out the brake booster and gasket.

