


INSTALLATION


1. INSTALL ABS ACTUATOR

- (a) Install the 2 holders and 3 cushions to the ABS actuator.
- (b) Install the ABS actuator to the actuator bracket with the 2 nuts.


Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

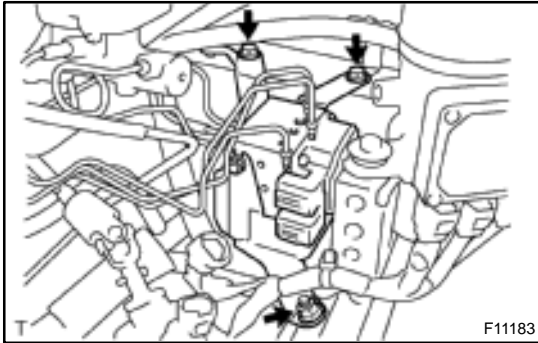


- (c) Install the ABS actuator assembly with the 2 bolts and nut.
Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

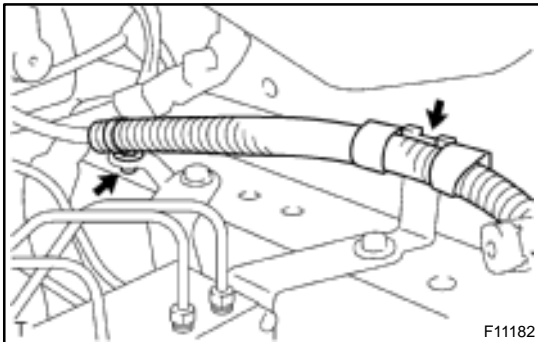

- (d) Connect the 2 harness clamps.

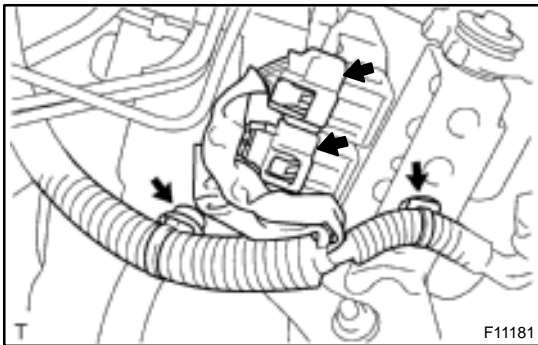

- (e) Connect the 2 harness clamps and 2 actuator connectors.

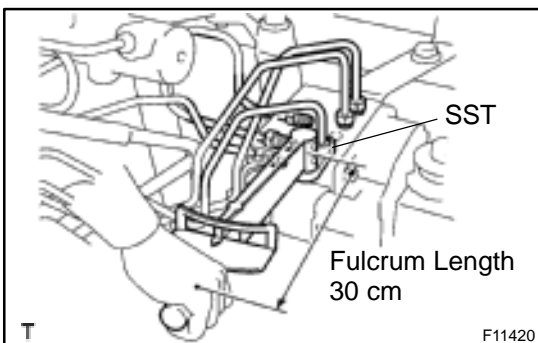

2. CONNECT BRAKE LINES TO ABS ACTUATOR

Using SST, connect the 6 brake lines.

SST 09023-00100

Torque:

15 N·m (155 kgf·cm, 11 ft·lbf)

14 N·m (143 kgf·cm, 10 ft·lbf) for use with SST

HINT:

Use a torque wrench with a fulcrum length of 30 cm (11.81in.).

3. FILL RESERVOIR WITH BRAKE FLUID AND BLEED BRAKE SYSTEM (See page BR-4)

4. CHECK FOR FLUID LEAKAGE
5. INSTALL LUGGAGE COMPARTMENT TRIM BOX COVER
6. INSTALL TOOL BOX