

WATER PUMP ON-VEHICLE INSPECTION


COOL-02

INSPECT WATER PUMP

NOTICE:

Be sure to do checking when the engine coolant is charged.

(a) Remove the drive belt (See page [CH-7](#)).

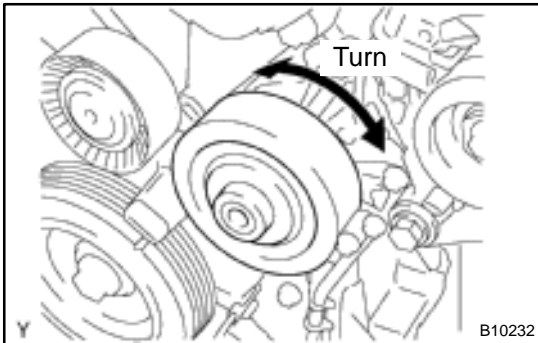

(b) Turn the pulley, and check that the water pump bearing moves smoothly and quietly.

If necessary, replace the water pump.

(c) Reinstall the drive belt (See page [CH-17](#)).