


INSPECTION

NOTICE:

Never rotate the pulley in a condition with a single unit of the water pump.

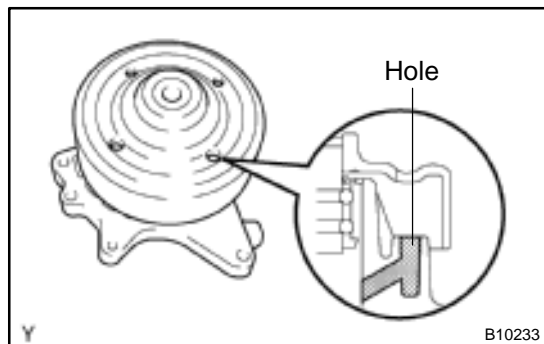

INSPECT WATER PUMP

Visually check the drain hole for coolant leakage.

If leakage is found, replace the water pump.