



REMOVAL

1. DRAIN ENGINE COOLANT (See page CO-2)
2. REMOVE TOOL BOX AND LUGGAGE COMPARTMENT TRIM BOX COVER

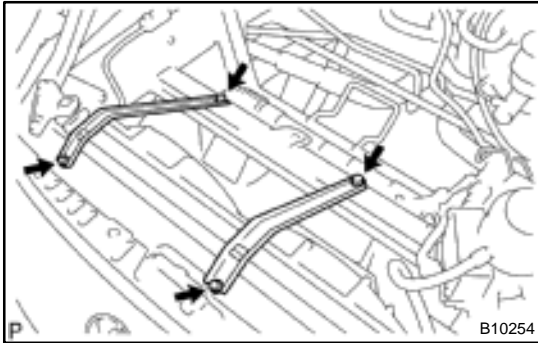

3. REMOVE RADIATOR ASSEMBLY

- (a) Remove the 2 bolts, 2 nuts and 2 spear wheel carrier extensions.
- (b) Disconnect the 2 electric cooling fan connectors.
- (c) Disconnect the 2 radiator hoses.

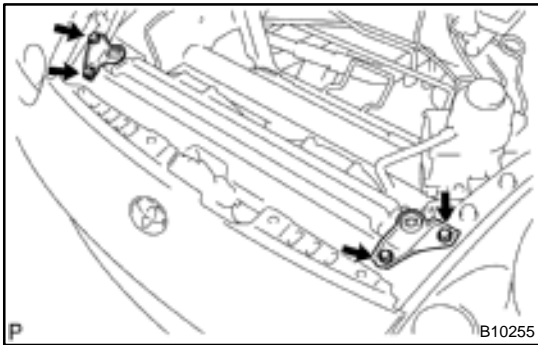

- (d) Remove the 4 bolts and 2 radiator upper supports.
- (e) Remove the 2 radiator lower support bushings.

4. REMOVE ELECTRIC COOLING FAN FROM RADIATOR

Remove the 2 bolts and electric cooling fan assembly.