


## REMOVAL

1. REMOVE TOOL BOX AND LUGGAGE COMPARTMENT TRIM BOX COVER
2. REMOVE ELECTRIC COOLING FAN
  - (a) Disconnect the 2 electric cooling fan connectors.

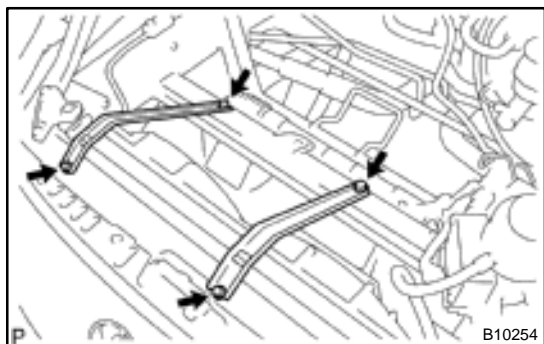

- (b) Remove the 2 bolts, 2 nuts and 2 spear wheel carrier extensions.
  - (c) Remove the 2 bolts and electric cooling fan.