



DISASSEMBLY

1. REMOVE FANS

Remove the nut and fan.

2. REMOVE FAN MOTORS

- (a) Disconnect the wire and connector holder from the fan shroud.
- (b) Remove the 3 screws and fan motor.