


COOLING FAN RELAY INSPECTION

COOYJ-01

1. INSPECT NO. 1 COOLING FAN RELAY

- (a) Remove the R/B No. 4 cover.
- (b) Remove the No. 1 cooling fan relay. (Marking: FAN No. 1)

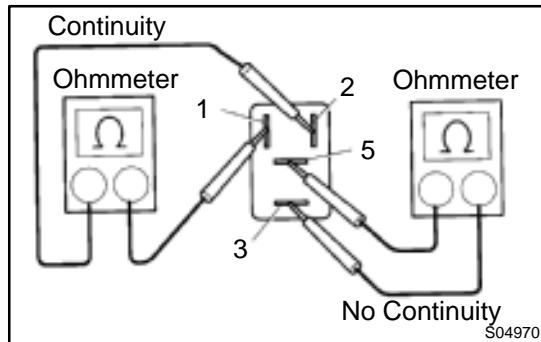


- (c) Inspect the No. 1 cooling fan relay continuity.
 - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

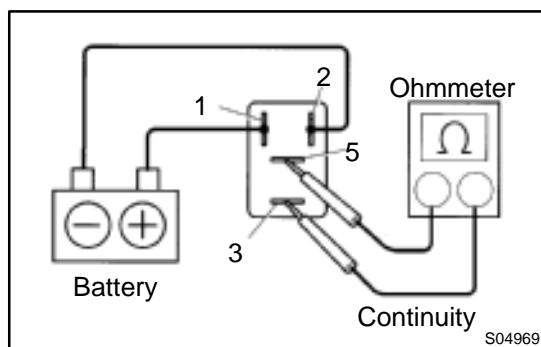

- (d) Inspect the No. 1 cooling fan relay operation.

- (1) Apply battery positive voltage across terminals 1 and 2.

- (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

- (e) Reinstall the No. 1 cooling fan relay.

- (f) Reinstall the R/B No. 4 cover.

2. INSPECT NO. 2 AND NO. 3 COOLING FAN RELAY (See page AC-73)