

DISASSEMBLY



1. REMOVE VALVE LIFTERS

HINT:

Arrange the valve lifters in the correct order.

2. REMOVE VALVES

- (a) Using SST, compress the valve spring and remove the 2 keepers.
- (b) Remove the spring retainer, valve spring and valve.
- (c) Using needle-nose pliers, remove the oil seal.

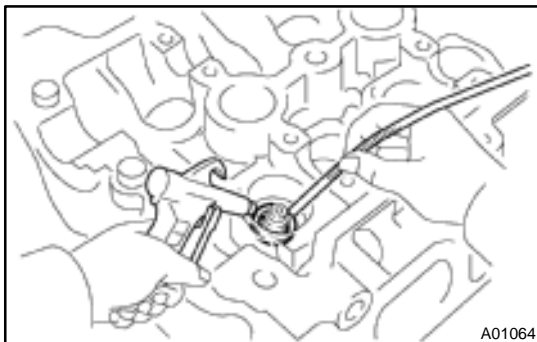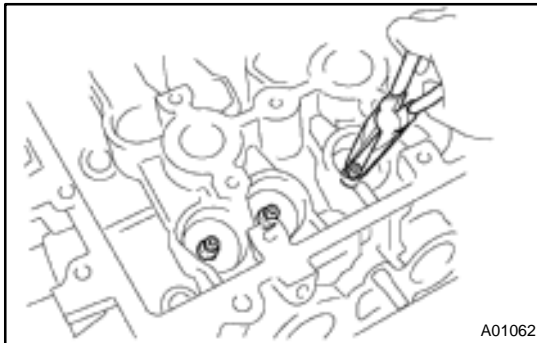

- (d) Using compressed air and a magnetic finger, remove the spring seat by blowing air.

HINT:

Arrange the valves, valve springs, spring seats and spring retainers in the correct order.