

# VEHICLE LIFT AND SUPPORT LOCATIONS


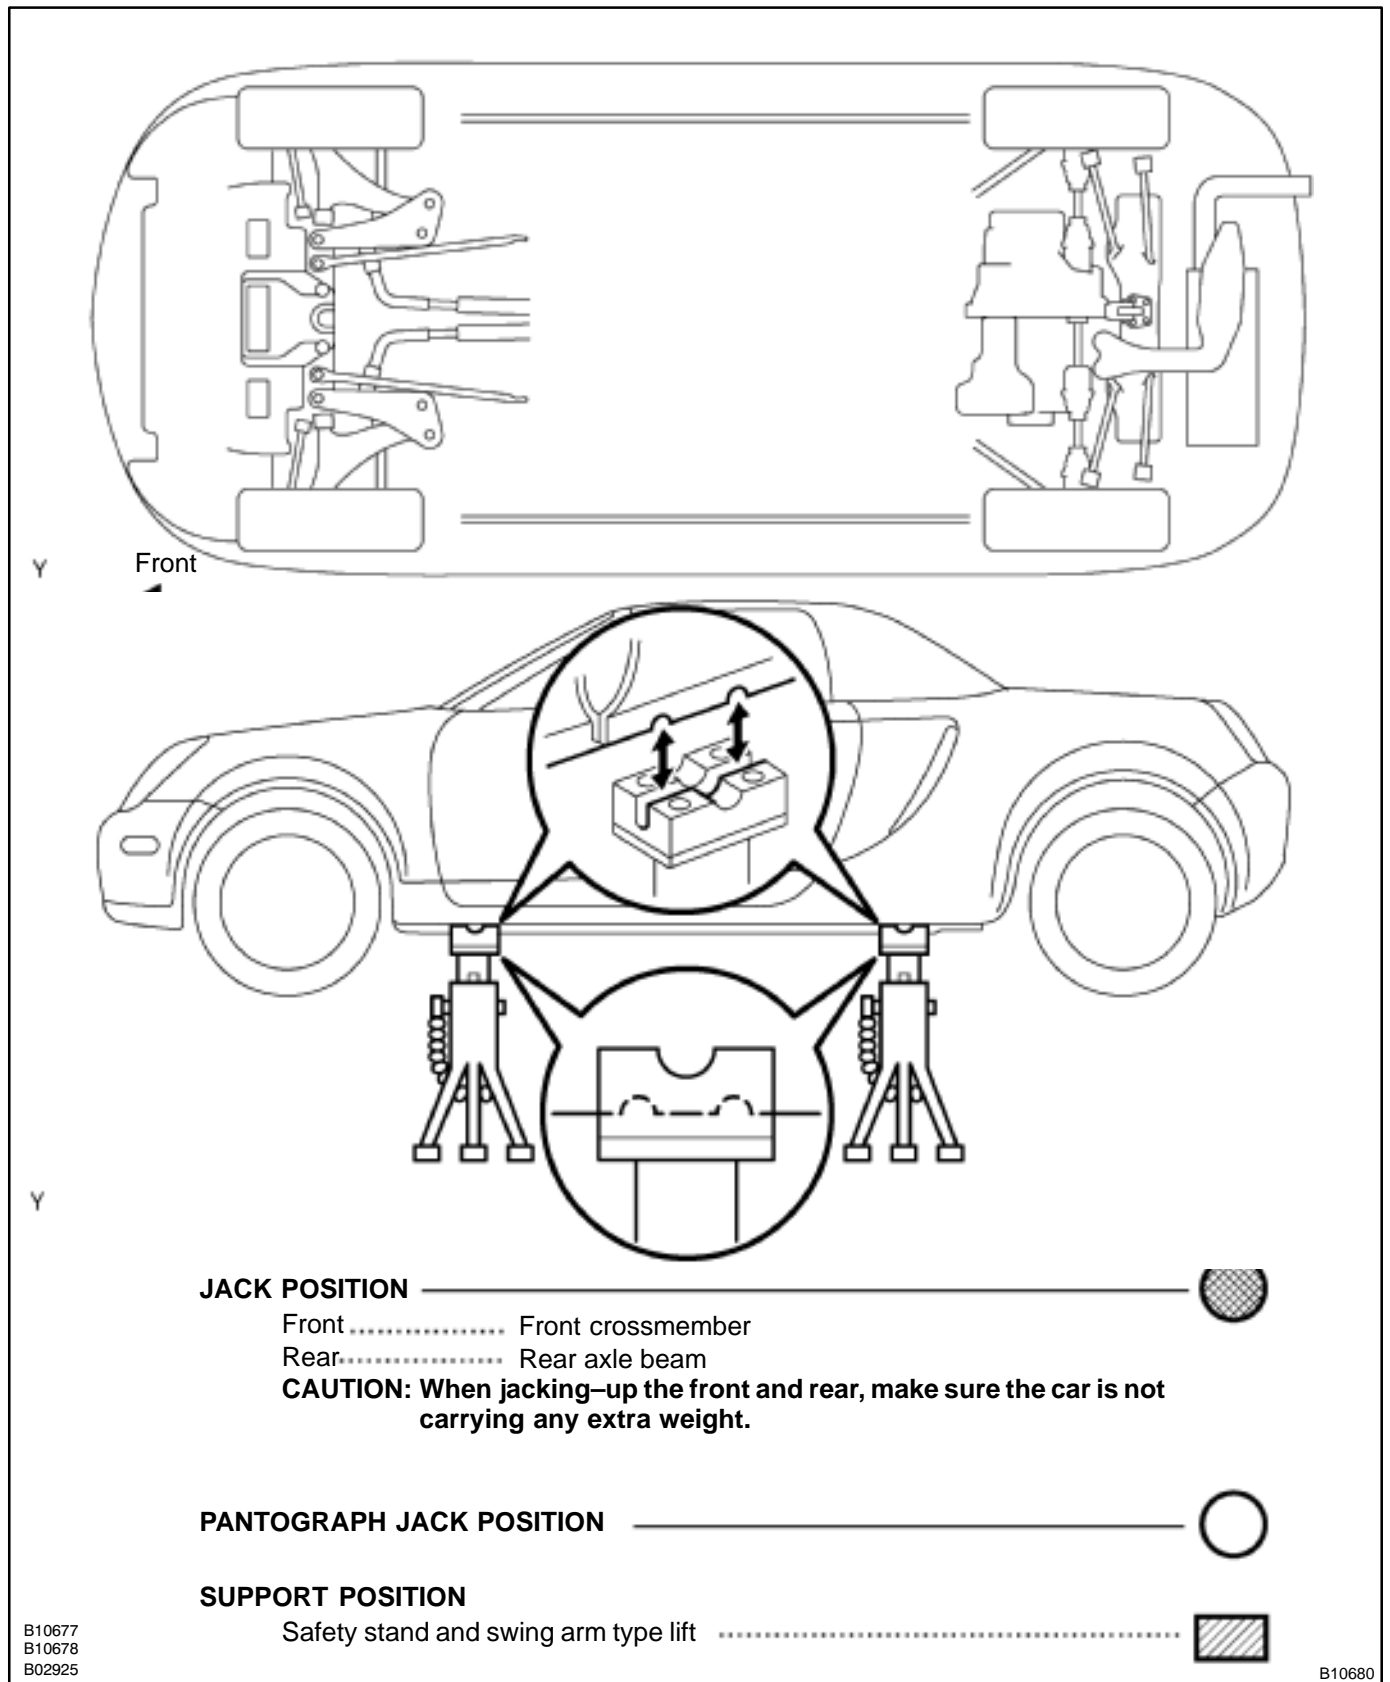


PLATE TYPE LIFT

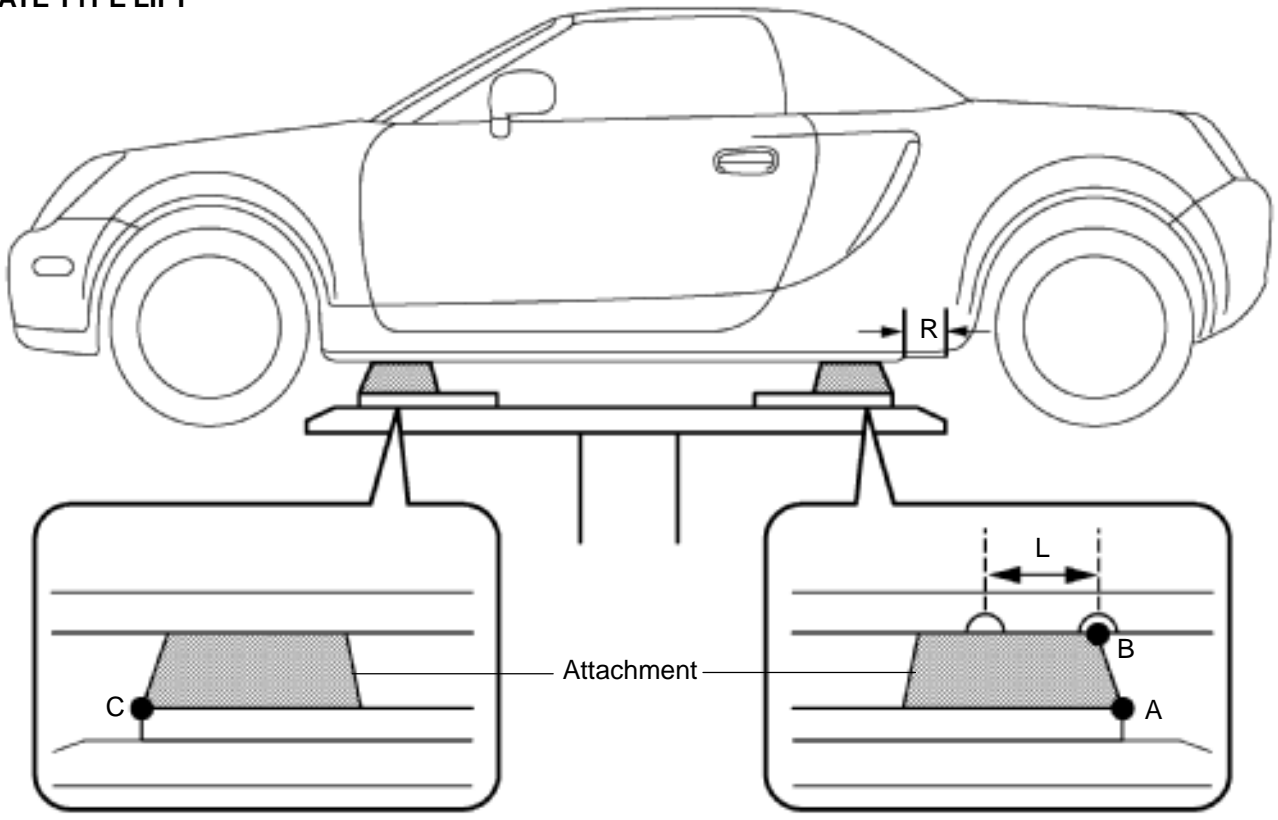

HINT:


- Left and right set position
- Front and rear set position

Place the vehicle over the center of the lift.

- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the rear jack supporting point (L).

**NOTICE:** Do not support position "R" at the rear side with the attachment. Also, placing the attachment at position "R" may cause deformation of the fender.

Attachment dimensions

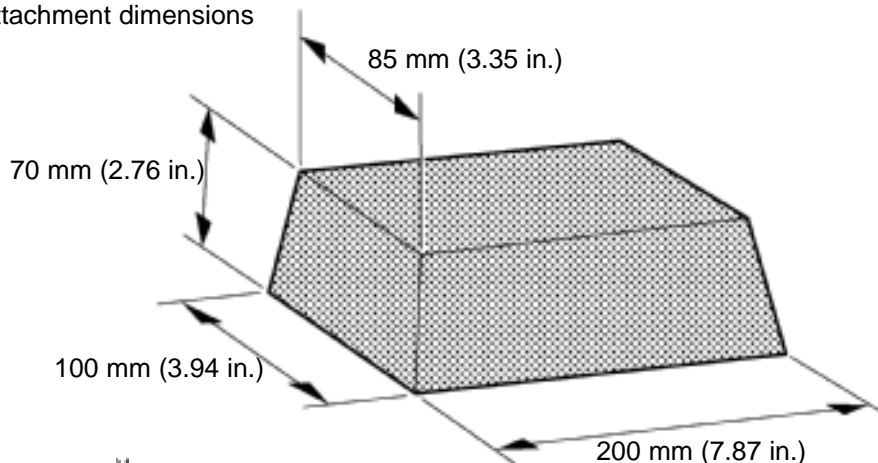

B10679  
B11105

B10681