

DISASSEMBLY

1. REMOVE RELIEF VALVE

Remove the plug, spring and relief valve.

2. REMOVE DRIVE AND DRIVEN ROTORS

Remove the 3 screws, pump body cover, drive and driven rotors.