


ENGINE INSPECTION

MA00R-09

HINT:

Inspect these items when the engine is cold.

1. **INSPECT DRIVE BELT** (See page [CH-2](#))
2. **REPLACE SPARK PLUGS** (See page [IG-1](#))

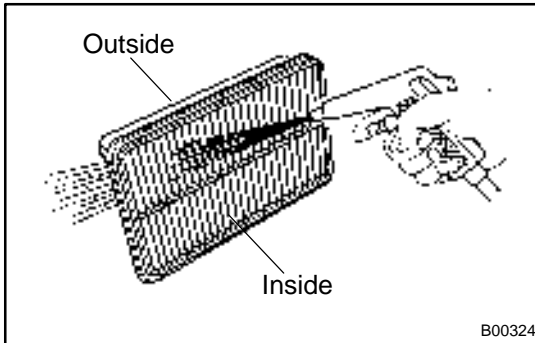

3. INSPECT AIR FILTER

- (a) Visually check that the air filter is not excessively dirty or oily.

HINT:

Oiliness may indicate a stuck PCV valve.

If necessary, replace the air filter.

- (b) Clean the air filter with compressed air.
First blow from the inside thoroughly, then blow off the outside of the air filter.

4. REPLACE AIR FILTER

Replace the air filter with a new one.

5. **REPLACE ENGINE OIL AND OIL FILTER**
(See page [LU-3](#))
6. **REPLACE ENGINE COOLANT** (See page [CO-2](#))
7. **REPLACE GASKET IN FUEL TANK CAP**
(See page [EC-6](#))
8. **INSPECT FUEL LINES AND CONNECTIONS** (See page [EC-6](#))
9. **INSPECT EXHAUST PIPES AND MOUNTINGS** (See page [EC-11](#))
10. **ADJUST VALVE CLEARANCE** (See page [EM-4](#))