

INSTALLATION

Installation is in the reverse order of removal (See page [MX-4](#)).

HINT:

After installation, check and inspect items as follows.

- Rear wheel alignment (See page [SA-7](#)).
- Do the road test.