

REASSEMBLY

Reassembly is in the reverse order of disassembly (See page [MX-13](#)).

NOTICE:

When working with FIPG material, you must observe the followings.

- Using a razor blade and gasket scraper, remove all old FIPG material from the gasket surfaces.
- Thoroughly clean all components to remove all loose material.
- Clean both sealing surfaces with a non-residue solvent.
- Apply FIPG in an approx. 1 mm (0.04 in.) wide bead along the sealing surface.
- Parts must be assembled within 10 minutes of application. Otherwise, the FIPG material must be removed and reapplied.

HINT:

Coat all of the sliding and rotating surfaces with gear oil before reassembly.