












 













MANUAL TRANSAXLE










SST (Special Service Tools)

PP2LW-01

	09223-50010	Crankshaft Front oil Seal Replacer	Output shaft front bearing inner race
	09226-10010	Crankshaft Front & Rear Bearing Replacer	Transmission case oil seal
	09308-00010	Oil Seal Puller	Output shaft front bearing
	09309-12020	5th Driven Gear Replacer	
	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	Differential tapered roller bearing Transmission case oil seal
	09350-32014	TOYOTA Automatic Transmission Tool Set	
	(09351-32120)	Overdrive Bearing Replacer	Differential tapered roller bearing
	(09351-32140)	Oil Seal Replacer	Differential tapered roller bearing
	09564-32011	Differential Preload Adaptor	
	09608-00071	Drive Pinion Rear Bearing Cone Replacer	Input shaft rear radial ball bearing Output shaft rear radial ball bearing
	09612-65014	Steering Worm Bearing Puller	Input shaft front bearing Differential tapered roller bearing outer race

	09628-62011 Ball Joint Puller	5th driven gear
	09636-20010 Upper Ball Joint Dust Cover Replacer	No.3 hub sleeve assembly
	09710-28021 Front Suspension Bushing Tool Set	
	(09710-08041) Bushing Replacer	Transaxle case oil seal
	09950-00020 Bearing Remover	
	09950-00030 Bearing Remover Attachment	Differential tapered roller bearing
	09950-30011 Puller A Set	No.3 clutch hub
	09950-40011 Puller B Set	5th driven gear
	09950-60010 Replacer Set	
	(09951-00200) Replacer 20	Control shaft cover bushing
	(09951-00210) Replacer 21	Control shaft cover bushing
	(09951-00230) Replacer 23	5th driven gear
	(09951-00270) Replacer 27	Control shaft cover oil seal

PREPARATION – MANUAL TRANSAXLE

	(09951-00350) Replacer 35	Differential tapered roller bearing
	(09951-00360) Replacer 36	Input shaft front oil seal Differential tapered roller bearing
	(09951-00400) Replacer 40	Input shaft front bearing
	(09951-00560) Replacer 56	Output shaft front bearing
	09950-60020 Replacer Set No.2	
	(09951-00680) Replacer 68	Differential tapered roller bearing outer race (Transaxle case side)
	(09951-00710) Replacer 71	Differential tapered roller bearing outer race (Transmission case side)
	09950-70010 Handle Set	
	(09951-07150) Handle 150	