

TORQUE SPECIFICATION

Parttightened	N·m	kgf·cm	ft·lbf
Starter x Transaxle	37	380	28
End cover x Brush holder	1.5	15	13 in.·lbf
Starter housing x Magnetic switch	5.9	60	52 in.·lbf
End cover x Starter housing	5.9	60	52 in.·lbf
Lead wire x Terminal C of starter	5.9	60	52 in.·lbf
Terminal nut x Terminal C of starter, Terminal 30 of starter	17	170	12
Magnetic switch end cover x Magnetic switch	2.5	26	23 in.·lbf