



## REMOVAL

### 1. REMOVE FRONT ENGINE UNDER COVER

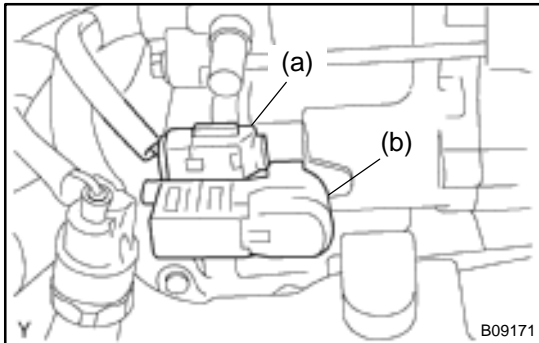

### 2. REMOVE STARTER

- (a) Disconnect the starter connector.
- (b) Remove the nut, and disconnect the starter wire.

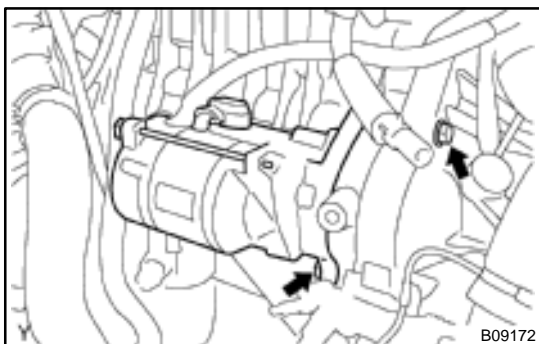

- (c) Remove the 2 bolts and starter.