

STARTING – STARTER

INSTALLATION

1. INSTALL STARTER


(a) Install the 2 bolts and starter.

HINT:

Each bolt length is indicated in the illustration.

Bolt "A"	64 mm (2.72 in.)
Bolt "B"	54 mm (2.13 in.)

ST0HR-02

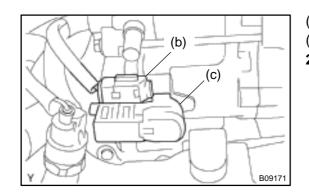

- (b) Connect the starter wire, and install the nut.
- (c) Connect the starter connector.

2. INSTALL FRONT ENGINE UNDER COVER