

TROUBLESHOOTING

SR08G-04

PROBLEM SYMPTOMS TABLE

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in the order shown. If necessary, repair or replace these parts.

Symptom	Suspect Area	See page
Hard steering	9. Tires (Improperly inflated)	SA-2
	10. Power steering fluid level (Low)	SR-4
	11. Front wheel alignment (Incorrect)	SA-4
	12. Steering system joints (Worn)	–
	13. Suspension arm ball joints (Worn)	SA-25
	14. Steering column (Binding)	–
Poor return	15. Power steering vane pump	SR-22
	16. Power steering gear	SR-32
	1. Tires (Improperly inflated)	SA-2
	2. Front wheel alignment (Incorrect)	SA-4
Excessive play	3. Steering column (Binding)	–
	4. Power steering gear	SR-32
	1. Steering system joints (Worn)	–
	2. Suspension arm ball joints (Worn)	SA-25
	3. Intermediate shaft, Sliding yoke (Worn)	–
Abnormal noise	4. Front wheel bearing (Worn)	SA-9
	5. Power steering gear	SR-32
	1. Power steering fluid level (Low)	SR-4
	2. Steering system joints (Worn)	–
	3. Power steering vane pump	SR-22
	4. Power steering gear	SR-32

HINT:

When the problem occurs on the Electro-Hydraulic Power Steering system, refer to the DI section (See page [DI-200](#)).