



## INSTALLATION


1. **INSTALL SLIDING YOKE AND NO. 2 COLUMN HOLE COVER TO NO. 2 INTERMEDIATE SHAFT**
  - (a) Install the No. 2 column hole cover and intermediate shaft dust cover
  - (b) Temporarily install the sliding yoke with the bolt.

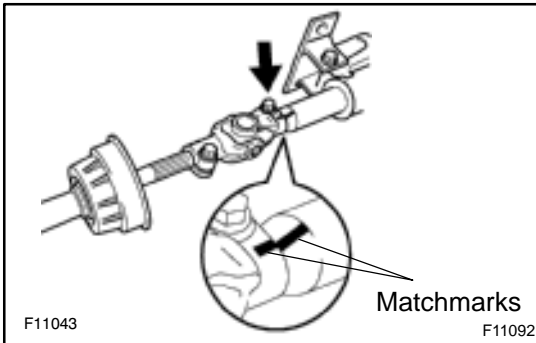


2. **INSTALL NO. 2 INTERMEDIATE SHAFT ASSEMBLY**
  - (a) Align the matchmarks on the sliding yoke and main shaft assembly.
  - (b) Install the No. 2 intermediate shaft assembly with the bolt.  
**Torque: 35 N·m (360 kgf·cm, 26 ft·lbf)**

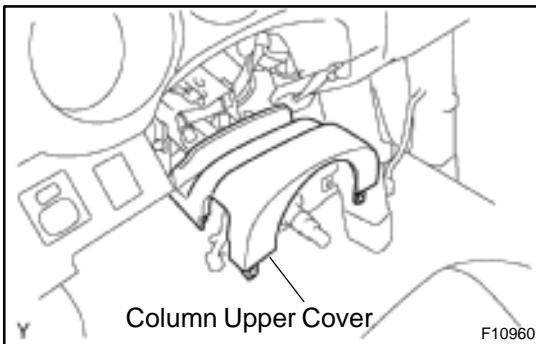

3. **PLACE COLUMN UPPER COVER TO STEERING COLUMN ASSEMBLY**
4. **INSTALL STEERING COLUMN ASSEMBLY**
  - (a) Install the steering column assembly with the 2 bolts and nuts.  
**Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)**
  - (b) Connect the 3 connectors and 2 wire harness clamps.

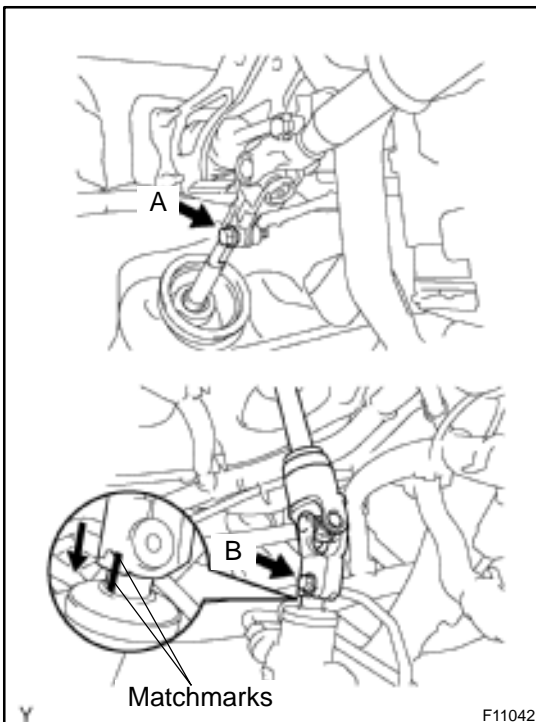

5. **CONNECT NO. 2 INTERMEDIATE SHAFT ASSEMBLY**
  - (a) Align the matchmarks on the No. 2 intermediate shaft assembly and control valve shaft.
  - (b) Install the bolt B.  
**Torque: 35 N·m (360 kgf·cm, 26 ft·lbf)**
  - (c) Torque the bolt A.  
**Torque: 35 N·m (360 kgf·cm, 26 ft·lbf)**
  - (d) Connect the No. 2 column hole cover and tighten the clamp.

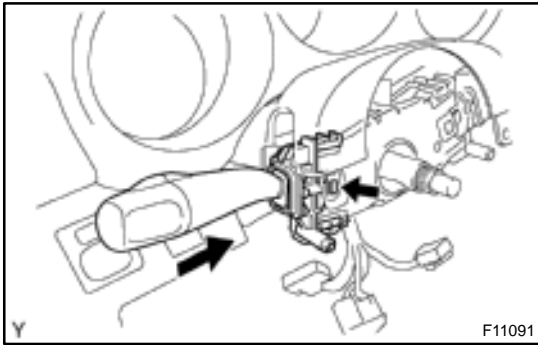

## 6. INSTALL LIGHT CONTROL SWITCH AND HEADLIGHT DIMMER SWITCH, WIPER AND WASHER SWITCH AND SPIRAL CABLE

- (a) Push into the light control switch and headlight dimmer switch until the claw is latched.
- (b) Employ the same manner described above to the wiper and washer switch.
- (c) Install the spiral cable.
- (d) Connect the airbag connector to the spiral cable.
- (e) Connect the 3 connectors to the spiral cable, light control switch and headlight dimmer switch and wiper and washer switch.

## 7. INSTALL COLUMN UPPER AND LOWER COVERS

Install the column upper and lower covers with the 3 screws.

## 8. INSTALL INSTRUMENT FINISH PANEL


- (a) Connect the DLC3.
- (b) Install the lower No. 1 instrument finish panel with the bolt and screw.
- (c) Connect the hood lock release lever and install the 2 screws.

## 9. CENTER SPIRAL CABLE

- (a) Check that the front wheels are facing straight ahead.
- (b) Turn the cable counterclockwise by hand until it becomes harder to turn.
- (c) Then rotate the cable clockwise about 2.5 turns to align the marks.

### HINT:

The cable will rotate about 2.5 turns to either left or right of the center.

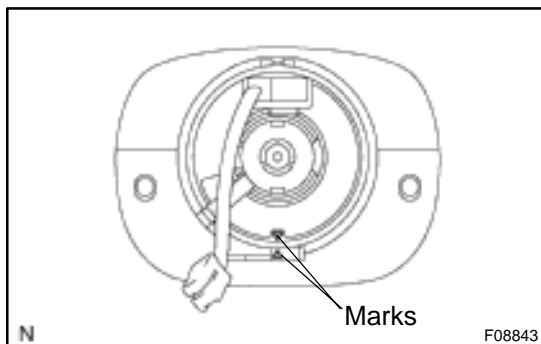

## 10. INSTALL STEERING WHEEL


- (a) Align the matchmarks on the steering wheel and main shaft assembly.
- (b) Install the steering wheel set nut.  
**Torque: 34 N·m (350 kgf·cm, 25 ft·lbf)**
- (c) Connect the connector.

## 11. INSTALL STEERING WHEEL PAD

### NOTICE:

- **Never use airbag parts from another vehicle. When replacing parts, replace with new ones.**
- **Make sure the wheel pad is installed with the specified torque.**
- **If the wheel pad has been dropped, or there are cracks, dents or other defects in the case or connector, replace the wheel pad with a new one.**
- **When installing the wheel pad, take care that the wirings do not interfere with other parts and that they are not pinched between other parts.**

- (a) Connect the airbag connector.

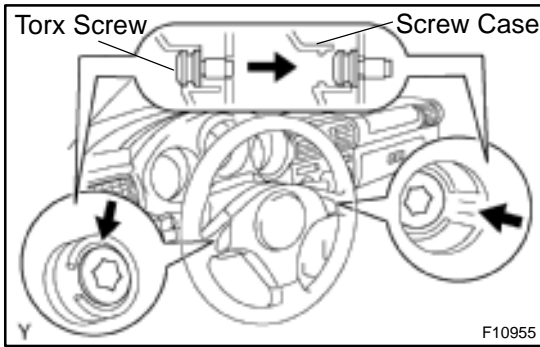

- (b) Install the steering wheel pad after confirming that the circumference groove of the torx screws is caught on the screw case.
- (c) Using a torx socket wrench (T30), torque the 2 screws.  
**Torque: 8.8 N·m (90 kgf·cm, 78 in.-lbf)**
- 12. CHECK STEERING WHEEL CENTER POINT**