


## REMOVAL

1. **REMOVE LUGGAGE COMPARTMENT TRIM BOX COVER**
2. **DISCONNECT ECU CONNECTORS**
3. **DISCONNECT RETURN HOSE**

Remove the clip and disconnect the return hose.

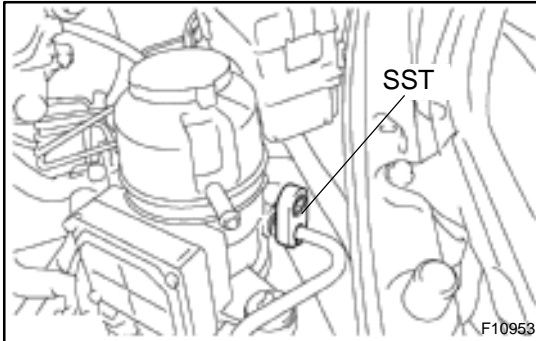

4. **DISCONNECT PRESSURE FEED TUBE**

Using SST, disconnect the pressure feed tube.

SST 09023-12700

5. **REMOVE POWER STEERING VANE PUMP**

Remove the 2 bolts, nut, 3 washers and power steering vane pump.