

REMOVAL

1. REMOVE STEERING WHEEL PAD
2. REMOVE STEERING WHEEL (See page [SR-10](#))
3. REMOVE CLUSTER FINISH PANEL
4. REMOVE UPPER AND LOWER COLUMN COVERS
5. REMOVE SPIRAL CABLE