

REASSEMBLY

REPLACEMENT REQUIREMENTS

In the following cases, replace the front airbag sensor.

- If the SRS has been deployed in a collision. (Replace both the left and right airbag sensors.)
- If the front airbag sensor has been found to be faulty in troubleshooting.
- If the front airbag sensor has been found to be faulty during checking (See page [RS-47](#)).
- If the front airbag sensor has been dropped.

CAUTION:

For removal and installation of the front airbag sensor, see pages [RS-46](#) and [RS-49](#). Be sure to follow the correct procedure.