

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the steering wheel pad, steering wheel or spiral cable.

Case	Part to be replaced
If the airbag has been deployed.	Steering wheel pad
If the steering wheel pad has been found to be faulty in troubleshooting.	Steering wheel pad
If the spiral cable has been found to be faulty in troubleshooting.	Spiral cable
If the steering wheel pad has been found to be faulty during checking (See page RS-13).	Steering wheel pad
If the steering wheel has been found to be faulty during checking (See page RS-13).	Steering wheel
If the spiral cable has been found to be faulty during checking (See page RS-13).	Spiral cable
If the steering wheel pad has been dropped.	Steering wheel pad

CAUTION:

For removal and installation of the steering wheel pad, see pages [SR-10](#) and [SR-19](#). Be sure to follow the correct procedure.