


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

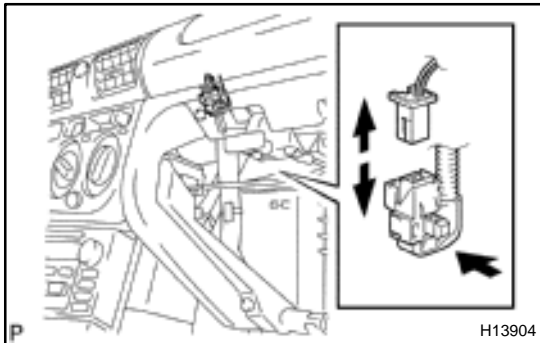


1. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the glove compartment door.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (b) Disconnect the airbag connector.

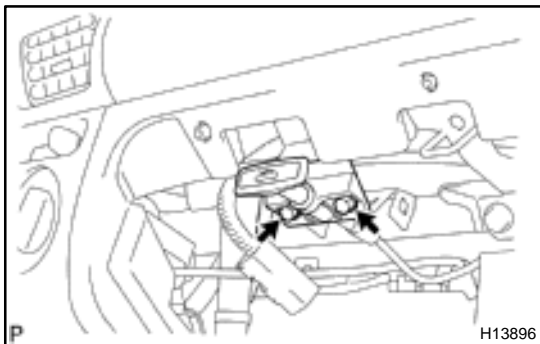


2. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 bolts and disconnect the hood release lever.



- (b) Remove the 2 bolts and disconnect the passenger airbag manual on-off switch.

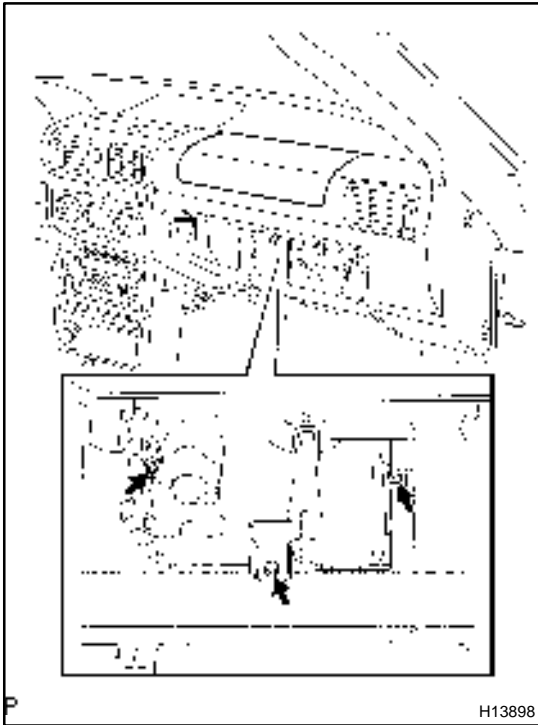

- (c) Remove the bolt, 2 nuts and front passenger airbag assembly.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
- Never disassemble the front passenger airbag assembly.

NOTICE:

When removing the front passenger airbag assembly, take care not to damage the wire harness.