

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the front passenger airbag assembly, instrument panel or instrument panel reinforcement.

Case	Part to be replaced
If the airbag has been deployed.	Front passenger airbag assembly
If the front passenger airbag assembly has been found to be faulty in troubleshooting.	Front passenger airbag assembly
If the front passenger airbag assembly has been found to be faulty during checking (See page RS-28).	Front passenger airbag assembly
If the instrument panel has been found to be faulty during checking (See page RS-28).	Instrument panel
If the instrument panel reinforcement has been found to be faulty during checking (See page RS-28).	Instrument panel reinforcement
If the front passenger airbag assembly has been dropped.	Front passenger airbag assembly

CAUTION:

For replacement of the front passenger airbag assembly, see pages RS-26 and RS-38. Be sure to follow the correct procedure.