


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.

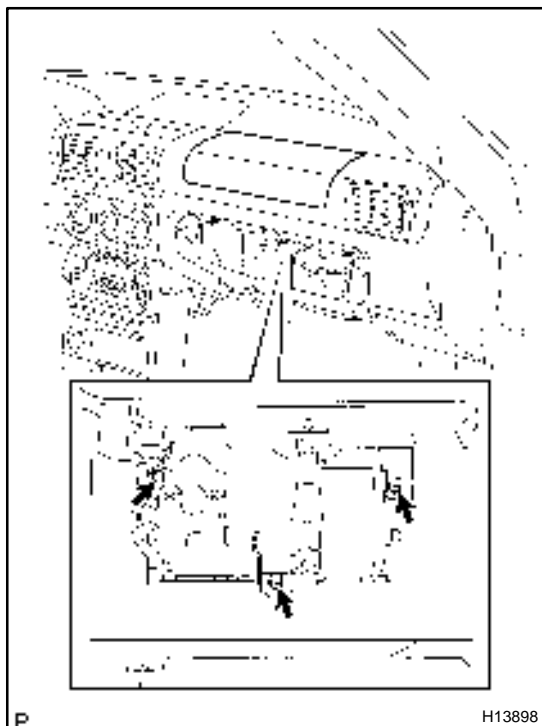

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

(a) Install the front passenger airbag assembly with the 2 nuts.

(b) Install the bolt.

Torque: 20 N·m (205 kgf-cm, 15 ft-lbf)

CAUTION:

- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.
- Make sure that no foreign objects are trapped between the airbag and within the module.


NOTICE:

If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.


(c) Install the airbag wire harness clamp.



(d) Install the passenger airbag manual on-off switch with the 2 bolts.

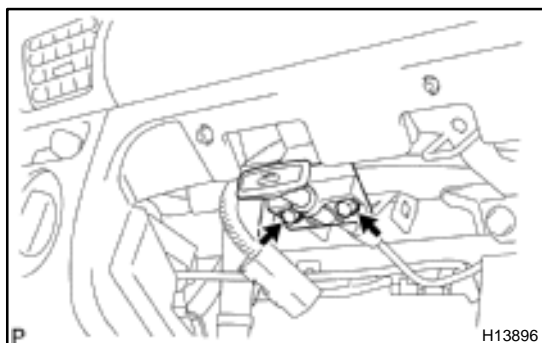

(e) Install the hood release lever with the 2 bolts.

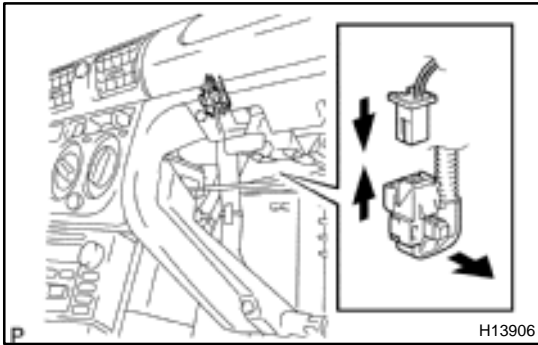**2. CONNECT AIRBAG CONNECTOR**

- (a) Connect the airbag connector.
- (b) Install the glove compartment door.